 





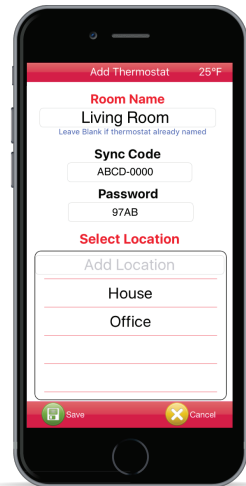 
## HBX Wi-Fi Zoning System Quick Start Guide

This Quick Start guide will walk you through the set up of your HBX Wi-Fi Zoning System App, and help you use its key features.

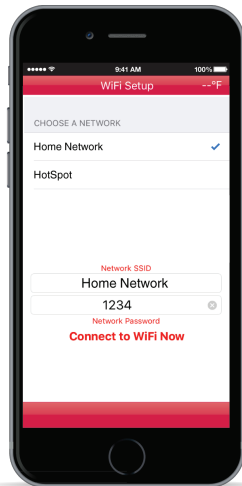

### Wi-Fi Setup

To start, simply connect to ThermoLinX™ in your Wi-Fi settings on your device and start the app (make sure to wait for the  to appear before starting the app.) In Wi-Fi setup on the app, connect to your home Wi-Fi network by selecting your network, entering your password and selecting "Connect to WiFi Now". When using a personal hotspot, manually enter your hotspot name in Network SSID and enter your hotspot password. Please allow up to 120 seconds (2 minutes) to connect.



 
### Adding Thermostats

Enter the sync code and password from your THM-0300 thermostat in zone setup options. \*Add a location name and press save.




*Do not use symbols for location name.*

*Passwords will never use the letter (O) and will use the number zero (0).*

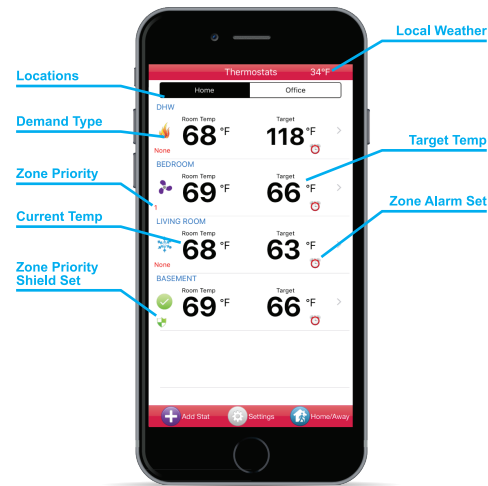


### Home Screen

 On the Home Screen you can view up to 20 zones per location and monitor current temperatures, targets, demands, priorities, alarms and local weather. The home buttons allow you to add more thermostats, adjust location settings and turn each zone to Home/Away Mode.

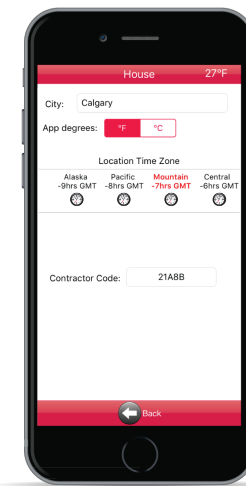




### Location Settings

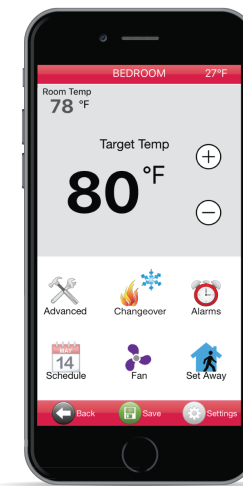 Enter the current location to view local weather temperature and set location time zone. Change App degrees from Fahrenheit (°F) to Celsius (°C). Enter a contractor code to unlock advanced settings options. Contact HBX for code.



### Increase/Decrease Target Temperature

 To increase or decrease the target temperature use the  or  buttons and select save.

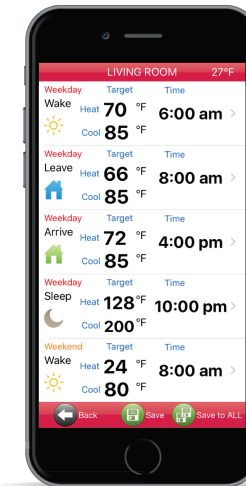

### Schedules

In this setting you can set up to 4 different schedules per day. Tap on the schedule to adjust your heating and/or cooling for that time.



## Learn More

Learn more about the HBX Wi-Fi Zoning System at

 
[www.hbxcontrols.com](http://www.hbxcontrols.com)

## Get Support

For support for this application and other HBX products, contact us:


[support@hbxccontrols.com](mailto:support@hbxccontrols.com)

+1 (403) 720 0029

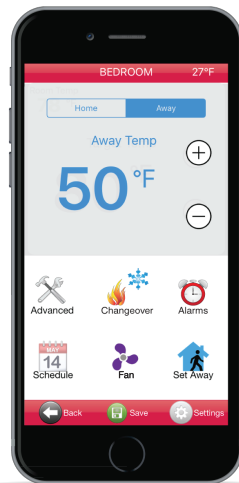


### Away Mode

 In Away Mode, you can set an away temperature for each zone using the  $\oplus$  or  $\ominus$  buttons and select save.

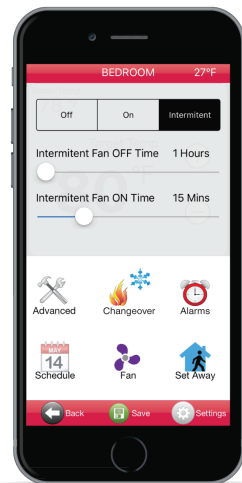


### Fan Settings

 This option allows you to turn your fan on or off, with the option to run your fan intermittently.

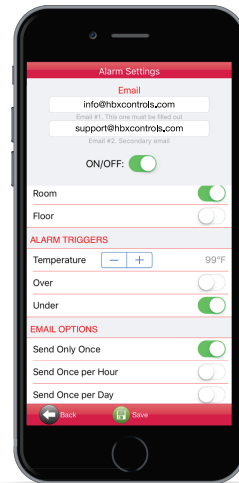


### Alarm Settings

 This option allows you to receive alarm notifications by email with frequency options from the HBX server. Select a room, floor or tank sensor and set a temperature for an alarm trigger. If the temperature falls below or rises above the set temperature an alarm email notification will be sent out to the email entered in Email #1 and Email #2.

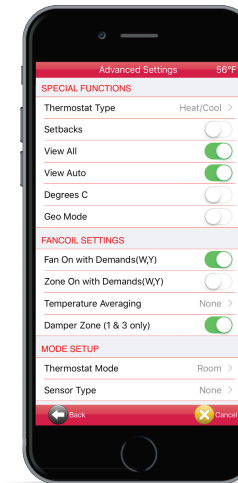


### Advanced Settings 1

 Enter the contractor code in location settings from the home screen menu to unlock advanced settings. In special functions you can select multiple heat and/or cool modes, setbacks and Geo Mode. In fancoil settings you can have your fan turn on for any heat/cool/zone demand that is made and/or set the zone as a damper zone.

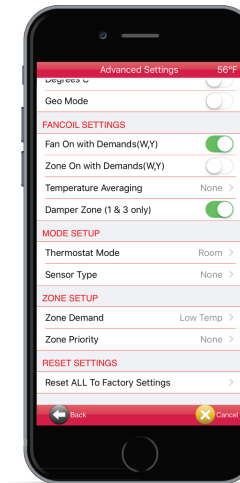

### Advanced Settings 2

 Mode Setup allows you to set your thermostat in room, floor or dual mode and select multiple sensor types. In Zone Setup you can choose up to four (4) different demands (low temp, high temp, DHW, Fancoil) for each zone and set priorities.

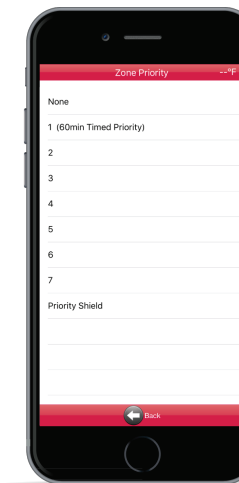

### Priorities

This option allows you to set a priority on a zone over other zones. Priorities range from 1 (highest) to 7 (lowest). Higher priorities will lock out lower priorities until the demand has been satisfied. Priority shield allows a zone to ignore other zone priorities.



*Priority 1 is a timed priority of 60 minutes, generally used for DHW.*