


Installation Instructions

for use by heating contractor

VIESSMANN[®]

Common venting for
Vitodens 200-W B2HE Series

Vitodens Common Venting System

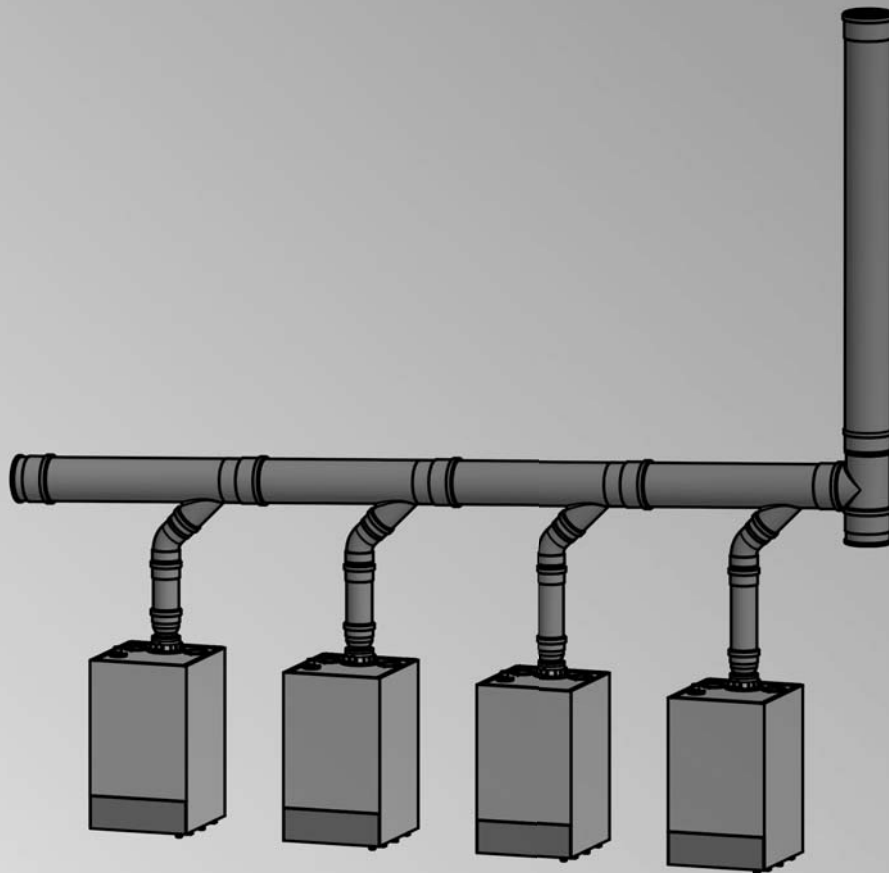

Product may not be exactly as shown

IMPORTANT

**Read and save these instructions
for future reference.**

Safety, Installation and Warranty Requirements

Please ensure that these instructions are read and understood before commencing installation. Failure to comply with the instructions listed below and details printed in this manual can cause product/property damage, severe personal injury, and/or loss of life. Ensure all requirements below are understood and fulfilled (including detailed information found in manual subsections).

■ **Licensed professional heating contractor**

The installation, adjustment, service and maintenance of this equipment must be performed by a licensed professional heating contractor.

► *Please see section entitled "Important Regulatory and Installation Requirements" in the Installation Instructions.*



■ **Product documentation**

Read all applicable documentation before commencing installation. Store documentation near boiler in a readily accessible location for reference in the future by service personnel.

► *For a listing of applicable literature, please see section entitled "Important Regulatory and Safety Requirements" in the Installation Instructions.*



■ **Carbon monoxide**

Improper installation, adjustment, service and/or maintenance can cause flue products to flow into living space. Flue products contain poisonous carbon monoxide gas.

► *For information pertaining to the proper installation, adjustment, service and maintenance of this equipment to avoid formation of carbon monoxide, please read these Installation Instructions carefully.*



■ **Equipment venting**

Never operate boiler without an installed venting system. An improper venting system can cause carbon monoxide poisoning.

■ **Warranty**

Information contained in this and related product documentation must be read and followed. Failure to do so renders the warranty null and void.



■ **Advice to owner**

Once the installation work is complete, the heating contractor must familiarize the system operator/ultimate owner with all equipment, as well as safety precautions/requirements, shutdown procedure, and the need for professional service annually before the heating season begins.

! WARNING

Installers must follow local regulations with respect to installation of carbon monoxide detectors. Follow manufacturer's maintenance schedule boiler.

Safety	Safety, Installation and Warranty Requirements.....2 Important Regulatory and Installation Requirements 4 About these Installation Instructions5
Venting	General Venting Information6 Requirements for Rigid SS/PP(s) Vent Pipe Material.....8 Vent Requirements9
Installation	Boiler Layout 10 2 Boiler Manifold Dimensions 12 3 Boiler Manifold Dimensions 13 4 Boiler Manifold Dimensions (linear) 14 4 Boiler Manifold Dimensions (Back-to-Back) 15 Venting Layout 16 Secondary Flue Gas Flapper 17 Common Flue with Room Air Dependant Combustion Air Intake 19 Common Flue with Room Air Independant Combustion Air Intake 20 Common Flue with Common Combustion Air Intake..... 21 Split Common Flue with Room Air Dependend Combustion Air Intake 22 Horizontal Common Flue with Common Combustion Air Intake 23 Boiler Input Ratings 24 Independent Combustion Air/Common Flue Vent Dimensions 24 Common Combustion Air/Common Flue Vent Dimensions 24 Elbow - Equivalent Length 25 Standard Sizes of Boiler Flue Gas Adaptors..... 25 Vent Termination Location Requirements - Vertical 26 Two Pipe System - Vertical Exhaust / Vertical Air Intake 27 Direct Venting (Two Pipe System) 28 Vent Length Requirements 29 Installing Vent Piping 30 Flue Vent Damper 31
Compoentry (System Options)	Two Pipe Options B2HE 85, 120, 150, 199 32 Single Pipe Options B2HE 85, 120, 150, 199 (Room Air Dependend)..... 34

Important Regulatory and Installation Requirements

Approvals

Viessmann boilers, burners and controls are approved for sale in North America by CSA International.

Codes

The installation of this unit shall be in accordance with local codes. In the absence of local codes, use:

- CSA C22.1 Part 1 and/or local codes in Canada
- National Electrical Code ANSI/NFPA 70 in the U.S.

Always use latest editions of codes.

The heating contractor must comply with the Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1 where required by the authority having jurisdiction.

Working on the equipment

The installation, adjustment, service, and maintenance of this product must be done by a licensed professional heating contractor who is qualified and experienced in the installation, service, and maintenance of hot water boilers. There are no user serviceable parts on the boiler, burner, or control.

Power supply

Install power supply in accordance with the regulations of the authorities having jurisdiction or, in absence of such requirements, in accordance with National Codes. Viessmann recommends the installation of a disconnect switch to the 120V power supply outside of the boiler room.


Ensure main power supply to equipment, the heating system, and all external controls have been deactivated. Close main oil or gas supply valve. Take precautions in both instances to avoid accidental activation of power during service work.

- ▶ Please carefully read this manual prior to attempting installation. Any warranty is null and void if these instructions are not followed.

For information regarding other Viessmann System Technology componentry, please reference documentation of the respective product.

We offer frequent installation and service seminars to familiarize our partners with our products. Please inquire.

- ▶ The completeness and functionality of field supplied electrical controls and components must be verified by the heating contractor. These include low water cut-offs, flow switches (if used), staging controls, pumps, motorized valves, air vents, thermostats, etc.

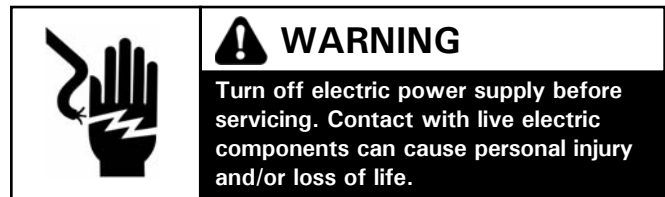

For installations on the Commonwealth of Massachusetts, the following modifications to NFPA-54 chapter 10 apply:

Excerpt from 248 CMR 5-08:

- 2(a) For all side-wall horizontally vented gas fueled equipment installed in every dwelling, building or structure used in whole or in part for residential purposes, including those owned or operated by the Commonwealth and where the side-wall exhaust vent termination is less than (7) feet above finished grade in the area of the venting, including but not limited to decks and porches, the following requirements shall be satisfied:
 1. **INSTALLATION OF CARBON MONOXIDE DETECTORS.** At the time of installation of the side-wall horizontal vented gas fueled equipment, the installing plumber or gas fitter shall observe that a hard wired carbon monoxide detector with an alarm and battery back-up is installed on the floor level where the gas equipment is to be installed. In addition, the installing plumber or gas fitter shall observe that a battery operated or hard wired carbon monoxide detector with an alarm is installed on each additional level of the dwelling, building or structure served by the side-wall horizontal vented gas fueled equipment. It shall be the responsibility of the property owner to secure the services of qualified licensed professional for the installation of hard-wired carbon monoxide detectors.
 - a. In the event that the side-wall horizontally vented gas fueled equipment is installed in a crawl space or an attic, the hard-wired carbon monoxide detector with alarm and battery back-up may be installed on the next adjacent floor level.
 - b. In the event that the requirements of this subdivision can not be met at the time of completion of installation, the owner shall have a period of thirty (30) days to comply with the above requirements; provided, however, that during said thirty (30) day period, a battery operated carbon monoxide detector with an alarm shall be installed.

Important Regulatory and Installation Requirements *(continued)*

2. APPROVED CARBON MONOXIDE DETECTORS. Each carbon monoxide detector as required in accordance with the above provisions shall comply with NFPA 720 and be ANSI/UL 2034 listed and IAS certified.
3. SIGNAGE. A metal or plastic identification plate shall be permanently mounted to the exterior of the building at a minimum height of eight (8) feet above grade directly in line with the exhaust vent terminal for the horizontally vented gas fueled heating appliance or equipment. The sign shall read, in print size no less than one-half (1/2) inch in size, "GAS VENT DIRECTLY BELOW. KEEP CLEAR OF ALL OBSTRUCTIONS".
4. INSPECTION. The state or local gas inspector of the side-wall horizontally vented gas fueled equipment shall not approve the installation unless, upon inspection, the inspector observes carbon monoxide detectors and signage installed in accordance with the provisions of 248 CMR 5.08(2)(a) 1 through 4.

(b) EXEMPTIONS: The following equipment is exempt from 248 CMR 5.08(2)(a) 1 through 4:

1. The equipment listed in Chapter 10 entitled "Equipment Not Required To Be Vented" in the most current edition of NFPA 54 as adopted by the Board; and
2. Product Approved side-wall horizontally vented gas fueled equipment installed in a room or structure separate from the dwelling, building or structure used in whole or in part for residential purposes.

About these Installation Instructions



Take note of all symbols and notations intended to draw attention to potential hazards or important product information.



WARNING

Warnings draw your attention to the presence of potential hazards or important product information.

- ▶ Indicates an imminently hazardous situation which, if not avoided, could result in death, serious injury or substantial product/property damage.



CAUTION

Cautions draw your attention to the presence of potential hazards or important product information.

- ▶ Indicates an imminently hazardous situation which, if not avoided, may result in minor injury or product / property damage.

IMPORTANT

- ▶ Helpful hints for installation, operation or maintenance which pertain to the product.



- ▶ This symbol indicates to note additional information



- ▶ This symbol indicates that other instructions must be referenced.

General Venting Information

Installation steps (outline)



See Installation Instructions supplied with the boiler.



WARNING

Ensure that the entire venting system is protected from physical damages. A damaged venting system may cause unsafe conditions.

IMPORTANT

Boiler operation in marine environments (damp, salty coastal areas):

The service life of the boiler's exposed metallic surfaces, such as the casing and fan housing, is directly influenced by proximity to damp and salty marine environments. In such areas, higher concentration levels of chlorides from sea spray, coupled with relative humidity, can lead to degradation of the exposed metallic surfaces mentioned above. Therefore, it is imperative that boilers installed in such environments not be installed using direct vent systems which draw outdoor air for combustion. Such boilers must be installed using room air dependent vent systems; i.e. using room air for combustion. The indoor air will have a much lower relative humidity and, hence, the corrosion will be minimized.

- Route vent pipe as directly as possible and with as few bends as possible to the boiler.
- Check proper location of gaskets in rigid PP pipe collars. (Only use supplied parts with the polypropylene venting system.) Apply water to lubricate the joint ends of the vent pipe collar and if used, the air intake pipe collar.
- Slide pipes into each other with a gentle twisting motion.
- Condensate must drain from the flue pipe to the boiler. Ensure a suitable gradient of at least 3° [approx. 2 in. per 3.3 ft. (50 mm per 1 m)].
- Use a hacksaw or sheet metal snips (for stainless steel) to cut pipes to length (if necessary). Use a file to smooth rough edges. Pipe must be round and not bent into an oval shape.

IMPORTANT

When cutting pipes to length, debur and clean pipes.

- For stainless steel and PP venting systems:
In conjunction with these instructions, follow the installation instructions supplied by the special venting manufacturer.

Combustion air intake, flex hose and adaptor must be installed. If using room air-independent venting system, connect the air intake pipe (from outdoors) to the adaptor provided. If room air-dependent venting system is used, the air is drawn into the burner inlet through boiler adaptor.

Recommended venting practice

When installing a venting system the following recommended venting practices apply:

- Keep length and number of 90° elbows to a minimum.
- Try not to use back-to-back 90° elbows.
- Use 45° elbows where possible to minimize the number of 90° elbows in case redirection of flue gas is required.
- The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

Exception:

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.

General Venting Information *(continued)*

Combustion air intake materials

Part	Material	Certified to Standards	Applicability
Combustion air pipe and fitting	Stainless steel	No applicable standards	U.S.A/Canada
	Galvanized steel	Suitable for outdoor use	
	PVC-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	CPVC Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	ABS-DWV Schedule 40	ANSI/ASTM D2661 CSA B181.1 ULC S102.2 ANSI/ASTM D2665, D1785 CSA B137.3, B181.2 ANSI/ASTM F441	
	Polypropylene PP(s)	UL1738 "Venting systems for gas-burning appliances, Categories II, III, IV" ULC S636 "Standard for Type BH gas venting systems" Class IIC 110°C	
Pipe cement, primer (for combustion air intake pipe)	PVC	ANSI/ASTM D2564 CSA B137.3	
	CPVC	ANSI/ASTM F493 CSA B137.6	
	ABS	ANSI/ASTM D2235 CSA B181.1/B182.1	

CAUTION
Do not use cellular (foam) core pipe material to vent this Vitocrossal boiler.

Flashing and storm collar installation

Flashings and storm collars are field supplied. Flashings and storm collars suitable for Type B vent materials (or better) may be used. To obtain flashings and storm collars, please contact your local vent material supplier. Follow the installation instructions supplied by the special venting manufacturer. Follow local codes to properly isolate the exhaust vent pipe when passing through floors, ceiling and roof. Always check the marking on the pipe to make sure you are using the correct material. Contact one of the suppliers (see listing on right) to order the vent system. Prior to installation, check that the correct single-wall vent parts were ordered and supplied.

Exhaust vent/air intake connection to boiler

The vent connection to the Vitodens boiler must be made with the starter stainless steel adaptor when using stainless steel (supplied by others).

IMPORTANT

For exhaust vent pipe material:
Do not use any other vent material.

CAUTION
On the job site, ensure that non-listed combustion air pipe materials are not inadvertently used instead of listed vent pipe material.

Vent System Suppliers

Use special venting system (UL/ULC listed for Category IV) for exhaust vent material of the Vitodens boilers (contact one of the venting suppliers).

Duravent Web: www.duravent.com	ICC - Industrial Chimney Co. www.icc-rsf.com
Selkirk Canada Corporation Web: www.selkirkchimney.com	Z-Flex US Inc. (Flexmaster Canda) www.z-flex.com
Centrotherm InnoFlue Web: www.centrotherm.us.com	Van-Packer Co. Inc. Web: www.vpstack.com
Security Chimneys International Ltd. Web: www.securitychimneys.com	Energex Inc. (formerly Exhausto) Web: www.energex.com

Note: For SS venting system order transition adaptors from the above mentioned suppliers.

Requirement for Rigid SS/PP(s) Vent Pipe Material

Requirements for PP and stainless steel



See Installation Instructions supplied with the boiler.

The venting system must be installed by a licensed professional heating contractor familiar with the operation and maintenance of heating appliances and venting. Before installing, ensure that the complete installation literature has been read. Failure to follow proper installation procedures as stated in these instructions, including vent pitch and proper appliance connections, may violate local, provincial/state, or national codes and cause unsafe conditions which may lead to severe property damage or personal injury.

The venting system must be installed in accordance with local building code requirements as well as national codes. For installations in Canada use CAN/CSA-B149.1 Natural Gas Installation Code or CAN/CSA-B149.2

Propane Installation Code as applicable; in the U.S. use the National Fuel Gas Code ANSI Z223.1 or NFPA Standard 54. Always use latest edition of applicable standard.

To ensure safe operation of the appliance, Viessmann recommends that the system be inspected once a year by a qualified service technician.

Every venting system must be planned and installed for optimum performance and safety. These Installation Instructions are designed to help you determine venting requirements and limitations with respect to installation. Please read and follow these instructions carefully.

It is the responsibility of the installer to contact local building and fire officials concerning any installation restrictions and/or inspection requirements that may apply. Permits may be required before commencement of the installation.

The air intake termination (if installed on a side wall) should be located on a wall that is least affected by prevailing winds. High winds may affect boiler operation. If wind is a problem, steps must be taken to shield the air intake termination from high winds, such as building a fence or planting shrubs. Ensure that the total equivalent vent length is not exceeded.

Because of its sealed combustion chamber, the Vitodens 200 gas-fired condensing boiler is suitable for operation with balanced flue (when using air intake system).

This PP vent system is constructed from flame-retardant plastic [polypropylene rated for a maximum temperature of 230°F (110°C)].

The PP venting system components must be listed to ULC S636 / UL-1738 (contact one of the venting suppliers see page 7).

DO NOT mix pipe, fittings, or joining methods from different vent system manufacturers.

The vent length requirements stated in this manual on page 23 must be observed.

Vent Requirements

Combustion air supply, room air dependent application only

This boiler requires fresh air for safe operation and must be installed in a mechanical room where there are provisions for adequate combustion and ventilation air.

Provisions for combustion and ventilation air must be made in accordance with CAN/CSA-B149.1 or .2 Natural Gas Installation Codes (for installations in Canada) or in accordance with sections for Combustion and Ventilation Air, of the National Fuel Gas Code, ANSI Z223.1 or applicable provisions of local codes (for installations in the U.S.A.) Always use latest edition of applicable standard.

Follow local codes to properly isolate the vent pipe when passing through floors, ceilings and roof.

Whenever possible, install boiler near an outside wall so that it is easy to duct fresh air directly to the boiler area. Refer to national codes for duct sizing. Round ducts may be used.

The boiler must be vented and supplied with combustion air and exhaust vents as described in this section. Ensure the vent and combustion air supply comply with these instructions.



WARNING

Failure to provide an adequate supply of fresh combustion air can cause poisonous flue gases to enter living space, which can cause severe personal injury or loss of life.

The boiler location should never be under negative pressure. Exhaust fans, attic fans, or dryer fans may cause air to be exhausted at a rate higher than the air can enter the structure for safe combustion. Corrective action must be taken to ensure enough air is available. Never cover the boiler or store debris or other materials near the boiler, or in any way block the flow of adequate fresh combustion air to the boiler.

You must know the free area of louvers used to cover up the combustion and ventilation openings in closet installations. If you do not know the free area, assume 20% for wood louvers and 60-75% free area for metal louvers. When using louvers, the openings have to be made larger.

For example, a free 14 in. x 6 in. (356 mm x 152 mm) opening becomes a 14 in. x 10 in. (356 mm x 254 mm) opening for a grill containing metal louvers.



CAUTION


Do not store chemicals containing chlorine or other corrosive materials near the boiler, such as bleach, cleaning solvents, detergents, acids, hair spray, spray cans, paint thinners, paint, water softener salt, perchloroethylene, or carbon tetra chloride.

Boiler Layout

General


- Only the Vitodens 200 boilers B2HE can be connected to a common vent (header).
- The Vitodens 200 boilers connected to the common vent must all be of the same size.
- A maximum of 4 boilers can be vented to a common venting system.
- A maximum of 4 boilers can be connected to a common air intake.
- Flue gas backflow is prevented by the integrated flue gas damper (see page 30).

Wall mounted boilers

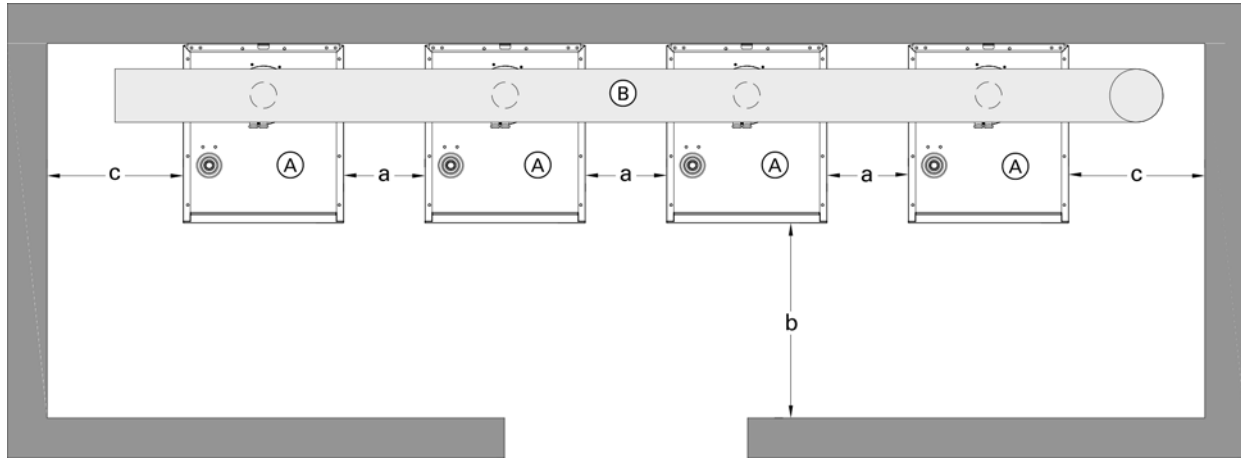

Legend

- Ⓐ Boiler
- Ⓑ Flue gas common venting system

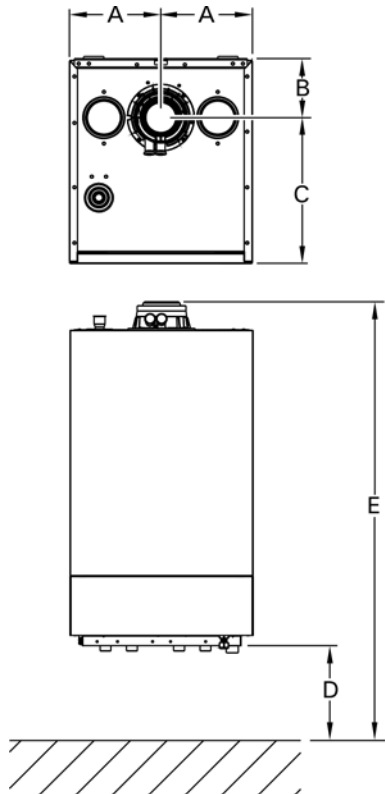


Service Clearance Dimensions	
a	6 in. (150 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

Boiler Dimensions		
	B2HE 85, 120 in. (mm)	B2HE 150, 199 in. (mm)
A	9 (225)	9 (225)
B	6 (150)	6 (150)
C	14¼ (359)	16½ (392)
D	40¾ (1031)	40¾ (1031)
E	74½ (1890)	79½ (2020)

Boiler Layout *(continued)*

Boilers mounted on a distribution manifold

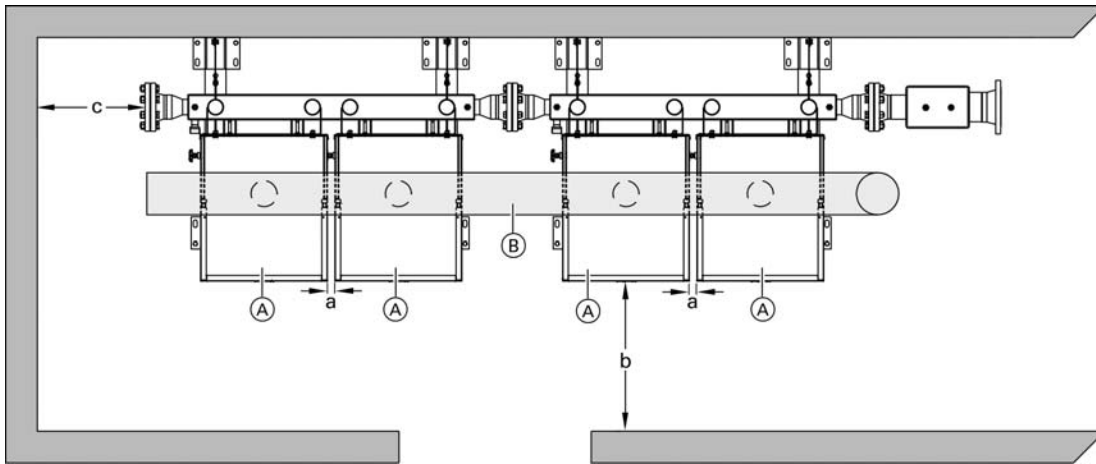


Legend

- (A) Boiler
- (B) Flue gas common venting system

Service Clearance Dimensions

a	1 in. (25 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

Boilers mounted on a back to back distribution manifold

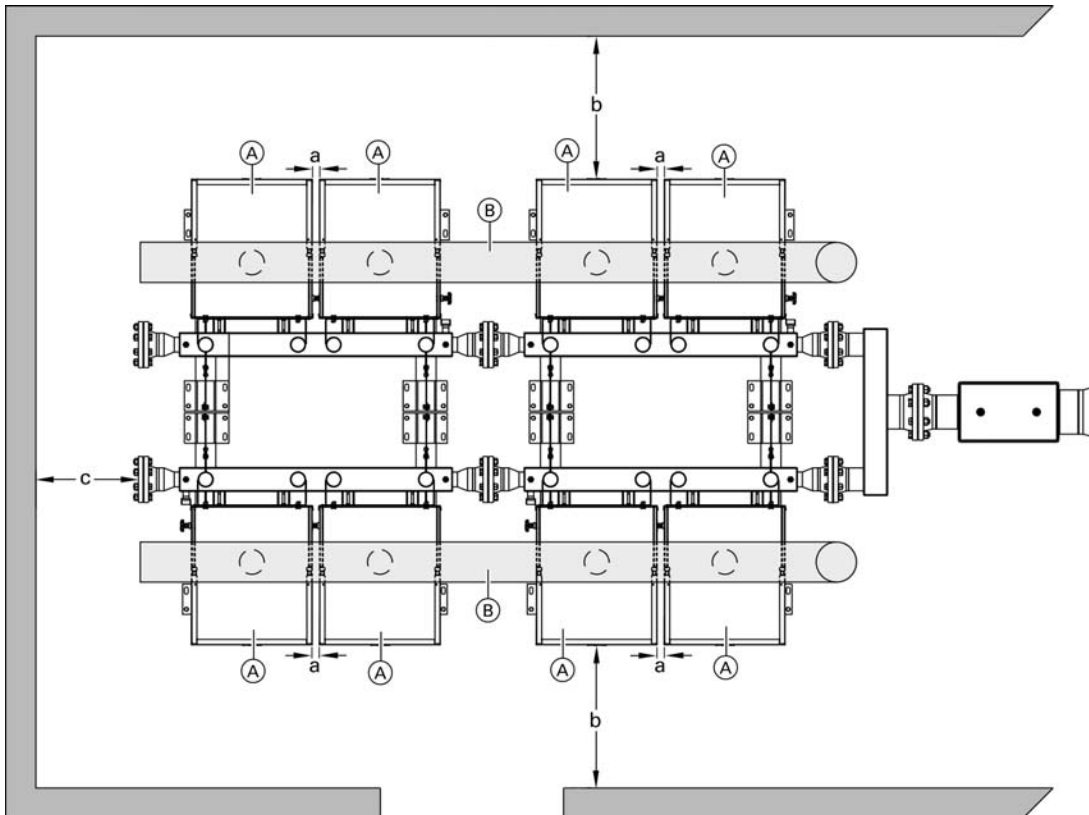

Legend


- (A) Boiler
- (B) Flue gas common venting system

Service Clearance Dimensions

a	1 in. (25 mm) minimum
b	28 in. (710 mm)
c	12 in. (305 mm)

2 Boiler Manifold Dimensions


Note: only B2HE-150/199 can be installed on a manifold.

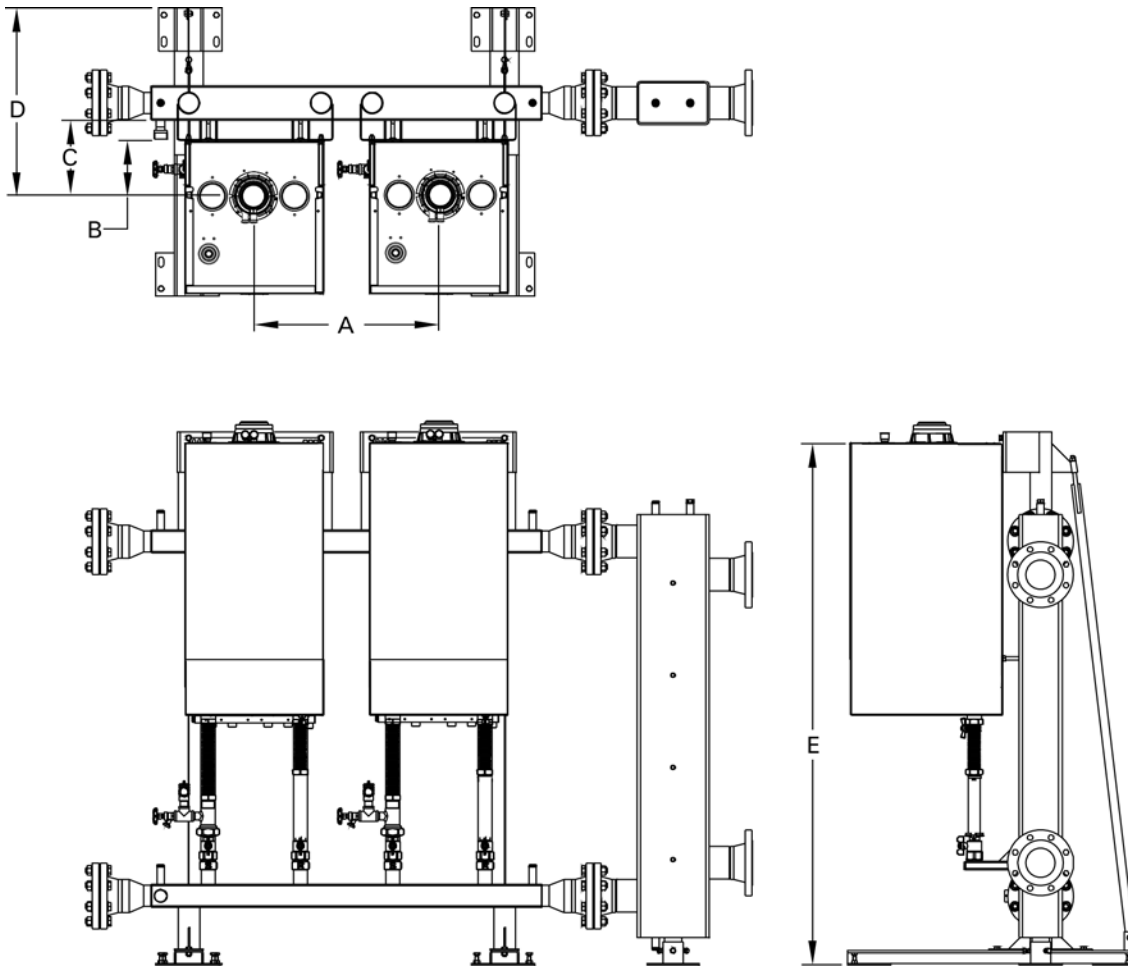

Boiler model #		B2HE-150/199
A	in. (mm)	25¼ (640)
B	in. (mm)	6¼ (159)
C	in. (mm)	9 (229)
D	in. (mm)	24¾ (619)
E	in. (mm)	76½ (1945)

3 Boiler Manifold Dimensions


Note: only B2HE-150/199 can be installed on a manifold.

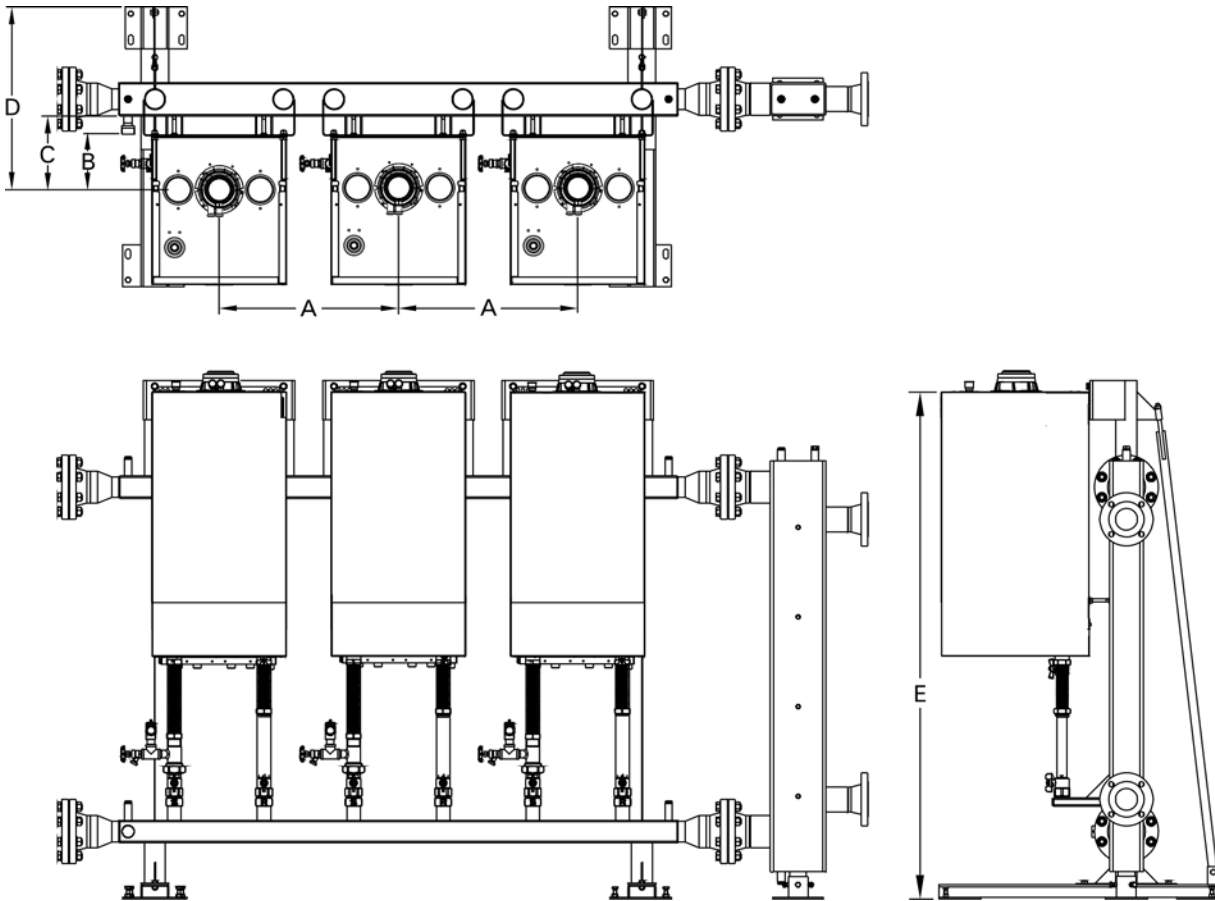

Boiler model #		B2HE-150/199
A	in. (mm)	25¼ (640)
B	in. (mm)	6¼ (159)
C	in. (mm)	9 (229)
D	in. (mm)	24¾ (619)
E	in. (mm)	76½ (1945)

4 Boiler Manifold Dimensions (Linear)




Note: only B2HE-150/199 can be installed on a manifold.

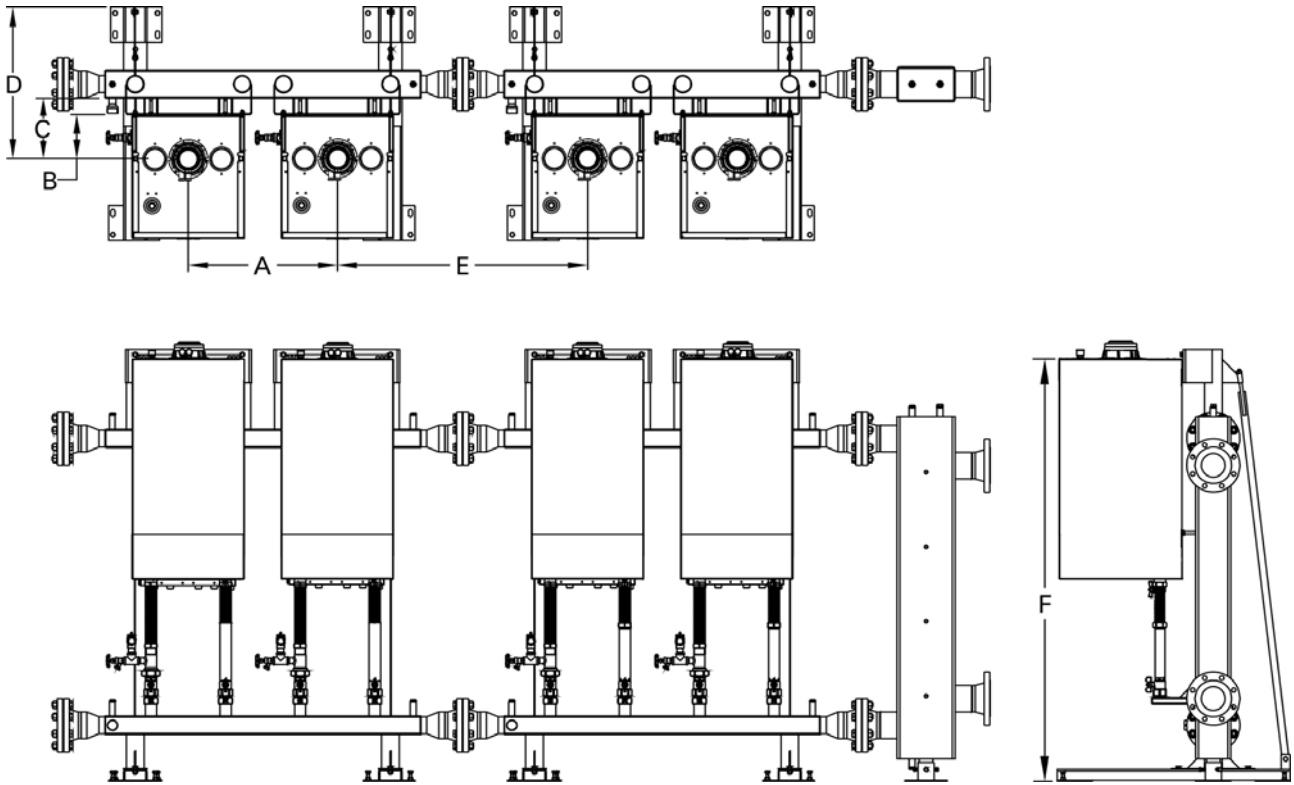

Boiler model #		B2HE-150/199
A	in. (mm)	25¼ (640)
B	in. (mm)	6¼ (159)
C	in. (mm)	9 (229)
D	in. (mm)	24¾ (619)
E	in. (mm)	76½ (1945)

4 Boiler Manifold Dimensions (Back-to-Back)

Note: only B2HE-150/199 can be installed on a manifold.

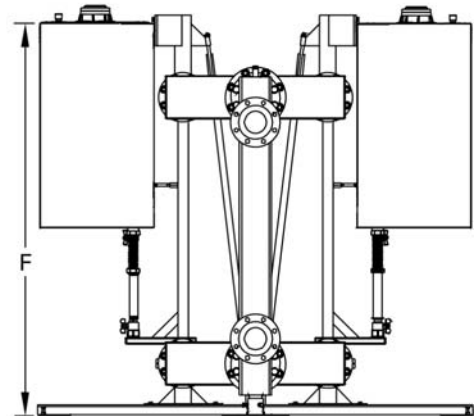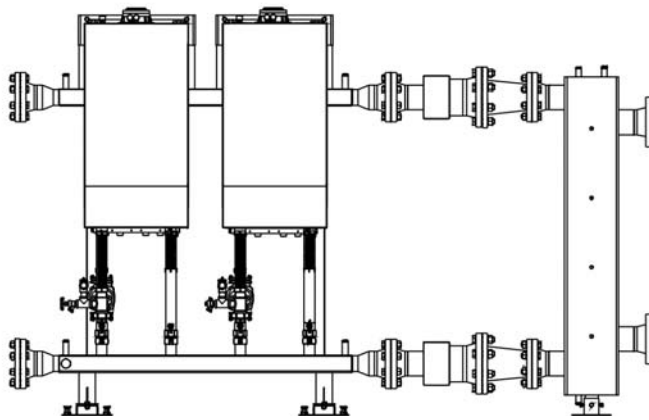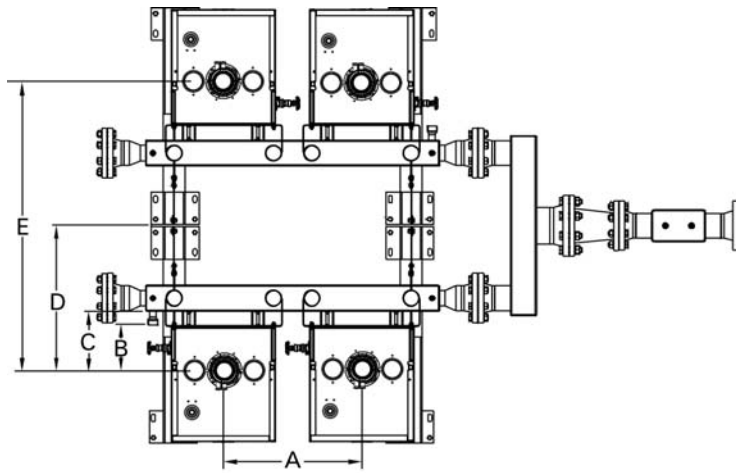

Boiler model #		B2HE-150/199
A	in. (mm)	25¼ (640)
B	in. (mm)	6¼ (159)
C	in. (mm)	9 (229)
D	in. (mm)	24¾ (619)
E	in. (mm)	76½ (1945)

Venting Layout

General

- Only positive pressure cat. IV may be used when common venting.
- The maximum equivalent length of the venting system must not exceed the values specified in the charts starting on page 23.
- Available pressure at the flue outlet is 250 pa. (1 "w.c.). Pressure available at the outlet of the boiler flue collar can be used to calculate a revised vent system by the vent manufacturer (if needed).

IMPORTANT

The manufacturer's vent flue gas back flow preventers are not required and must not be installed due to the integrated flue gas flapper (refer to page 30).

IMPORTANT


If the venting layout configurations described in these instructions are changed (e.g. including additional components) it is the responsibility of the venting manufacturer to recalculate the vent diameter. DO NOT reduce venting diameters listed.

IMPORTANT

The boiler flue connection is not designed to support the weight of the vent system connected to the boiler. Contact the vent manufacturer for proper support. See list of manufacturers on page 7.


IMPORTANT

Condensate must drain from the flue pipe to the boiler. Ensure a suitable gradient of at least 2-3° [approx. 2 in. per 3.3 ft. (50 mm per 1 m)] on any horizontal venting components.

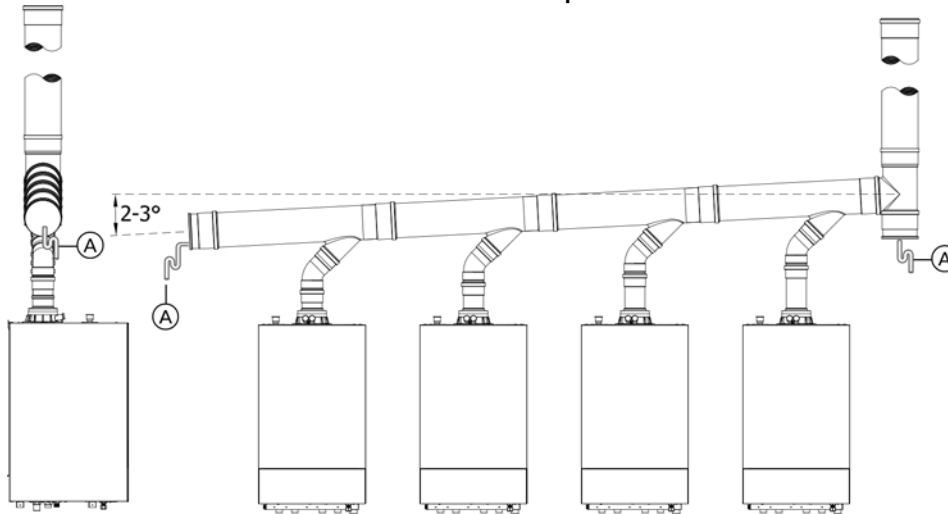

Legend


- (A) Condensate drain piping
- (B) Individual feed elbow(s)
- (C) Header elbow
- (D) Base tee

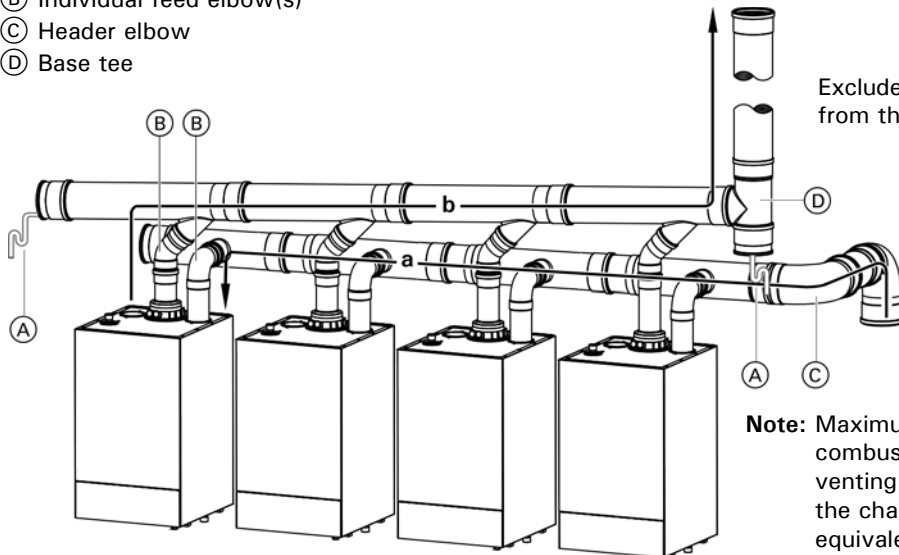


Exclude the header elbow (C) and base tee (D) from the equivalent vent length calculation.

Note: Maximum equivalent vent lengths for the combustion air intake (a) and the flue gas venting (b) are calculated separately. Refer to the charts starting on page 23 for maximum equivalent lengths.


Secondary Flue Gas Flapper

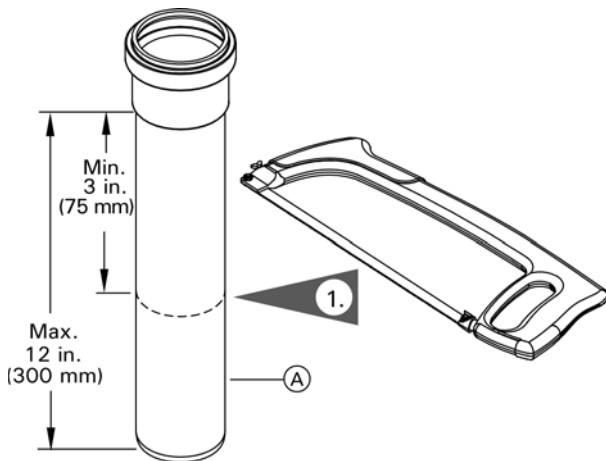

1. Cut the supplied 12 in. (300 mm) long PP(s) vent component to the required length. A minimum length of 3 in. (75 mm) is required.

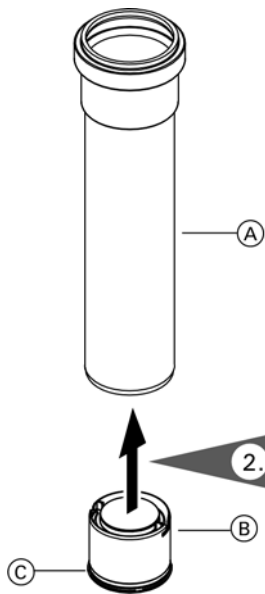


2. Insert the secondary flue gas flapper into the male end of the venting component. Apply water to the o-ring gasket to allow for smooth assembly.

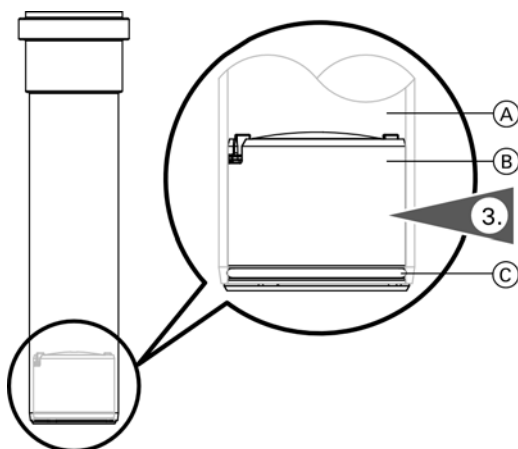

3. Ensure that the secondary flapper is fully seated within the venting component. A clicking sound will be heard when the secondary flue gas flapper is in place. The o-ring gasket must be fully seated within the vent component.

Legend

- (A) 12 in. long 80 mm PPs pipe (supplied with the kit)
- (B) Secondary Flue Gas Flapper (supplied with the kit)
- (C) O-ring gasket
(comes as part of the secondary flue gas flapper)

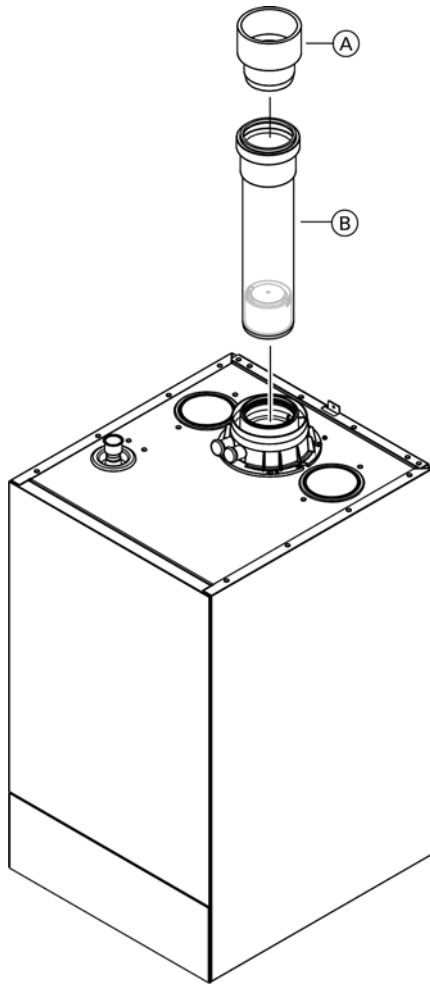Secondary Flue Gas Flapper *(continued)*


Install the vent pipe with the installed secondary flue gas flapper into the boiler vent collar.

If using a CPVC venting system install the 80 mm to 3 in. CPVC adaptor (Viessmann Part Number 7134770) into the flapper pipe.


Legend

- Ⓐ Vent pipe with secondary flue gas flapper
- Ⓑ 80 mm to 3 in. CPVC vent adaptor (if required)

Common Flue with Room Air Dependant Combustion Air Intake

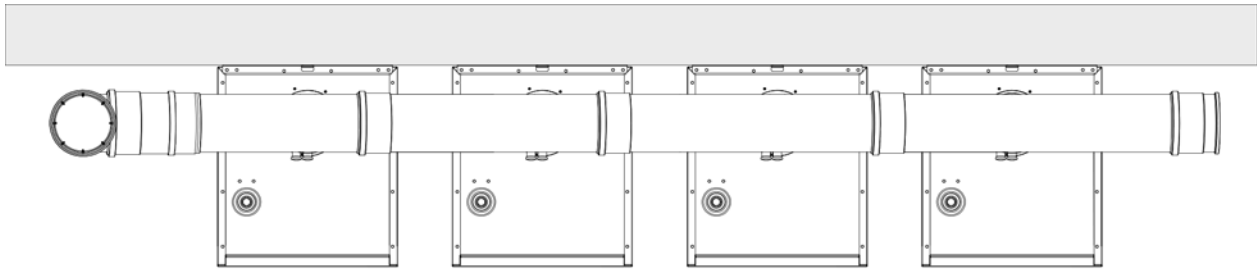


Top View

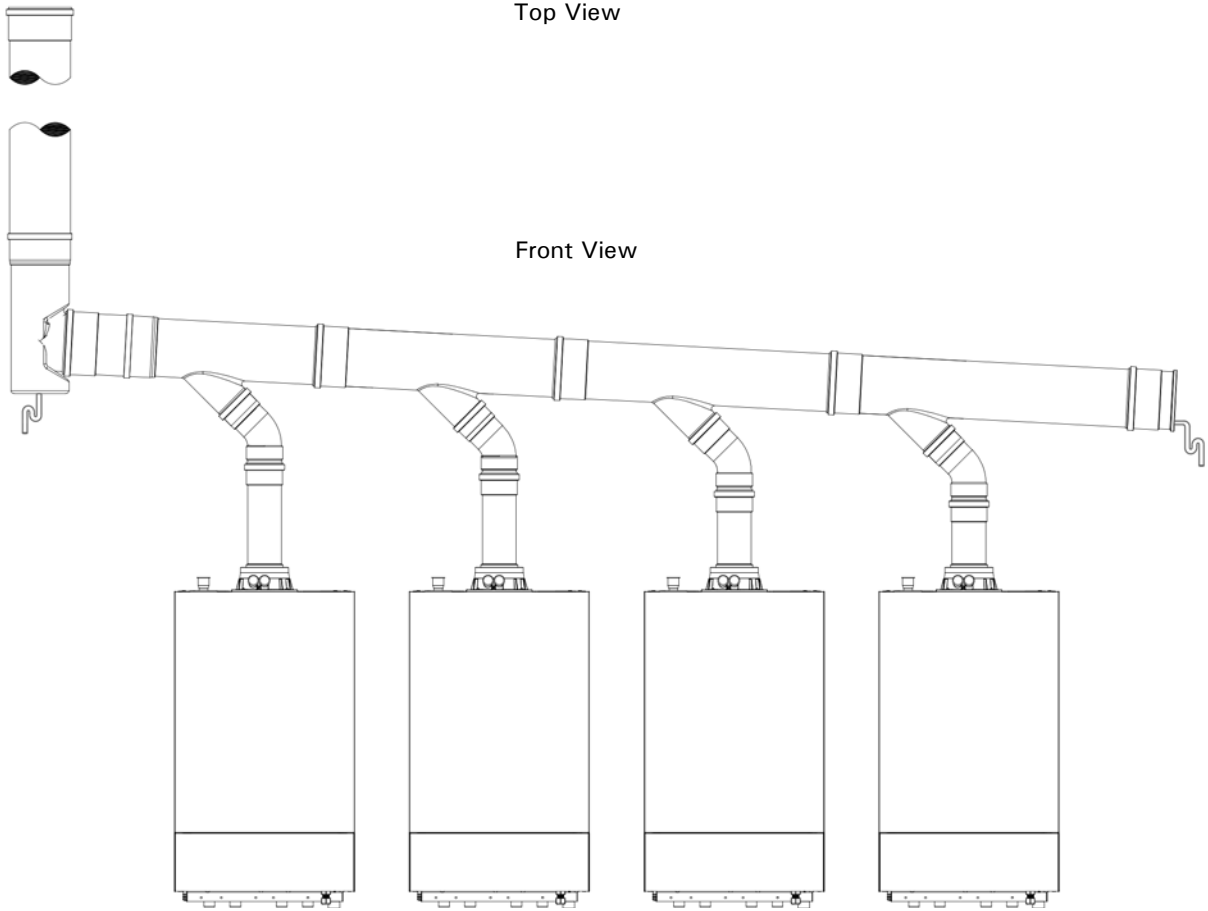


Front View

Note: This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

Common Flue with Room Air Independent Combustion Air Intake

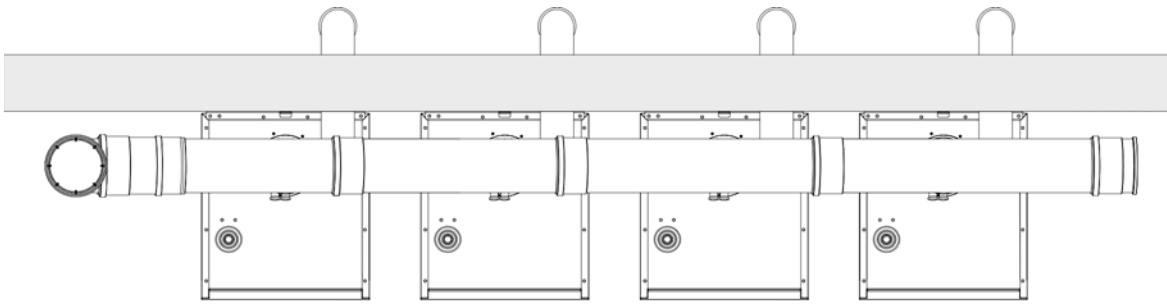


Top View

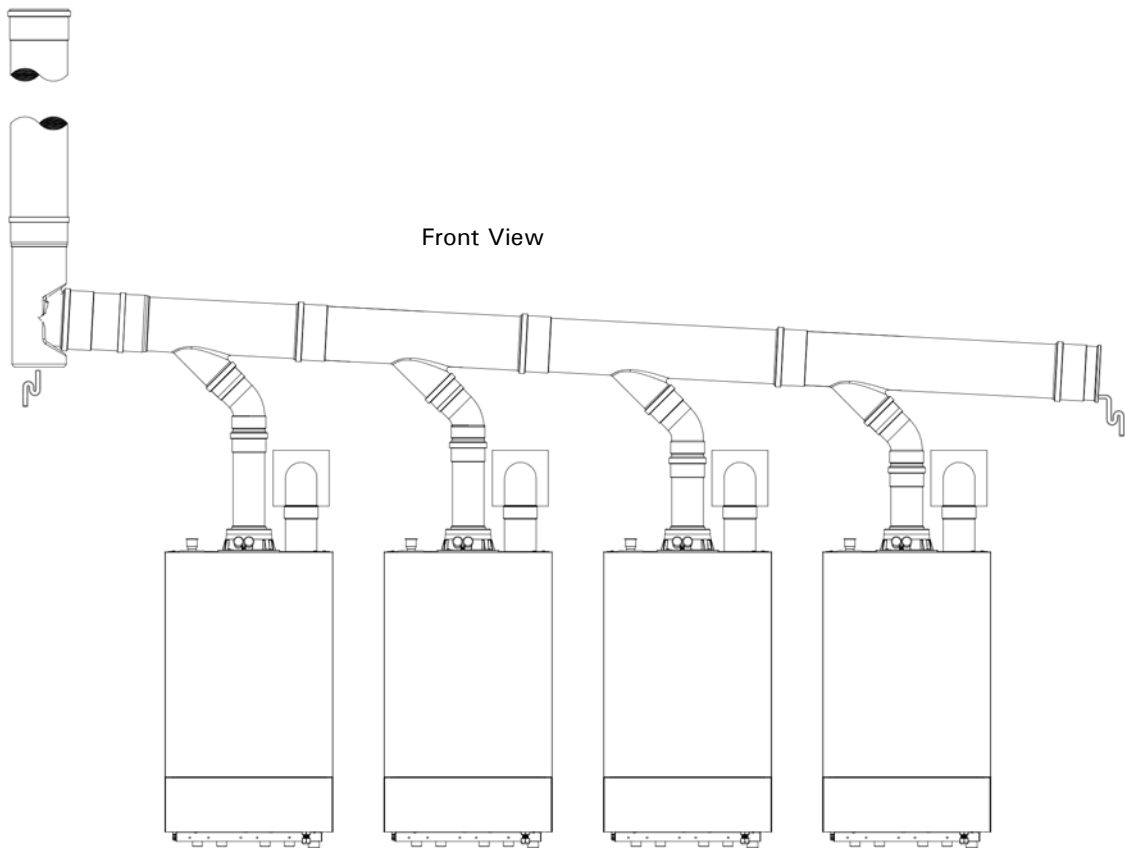


Front View

Note: This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

Common Flue with Common Combustion Air Intake

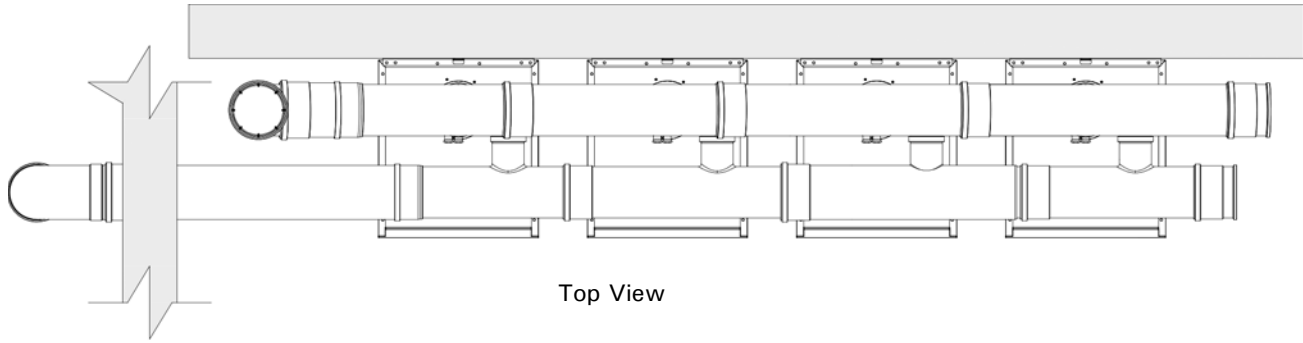



Top View

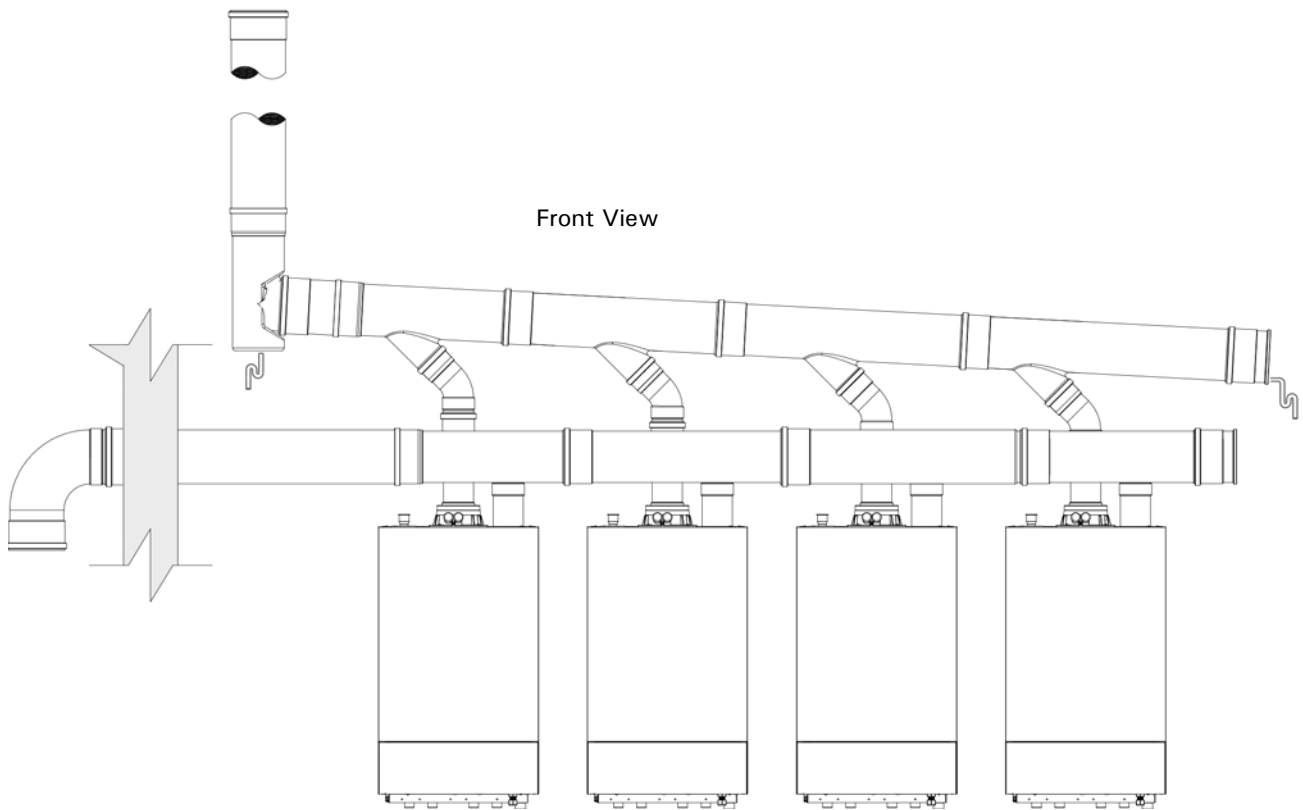

Front View


Note: This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

Split Common Flue with Room Air Dependent Combustion Air Intake

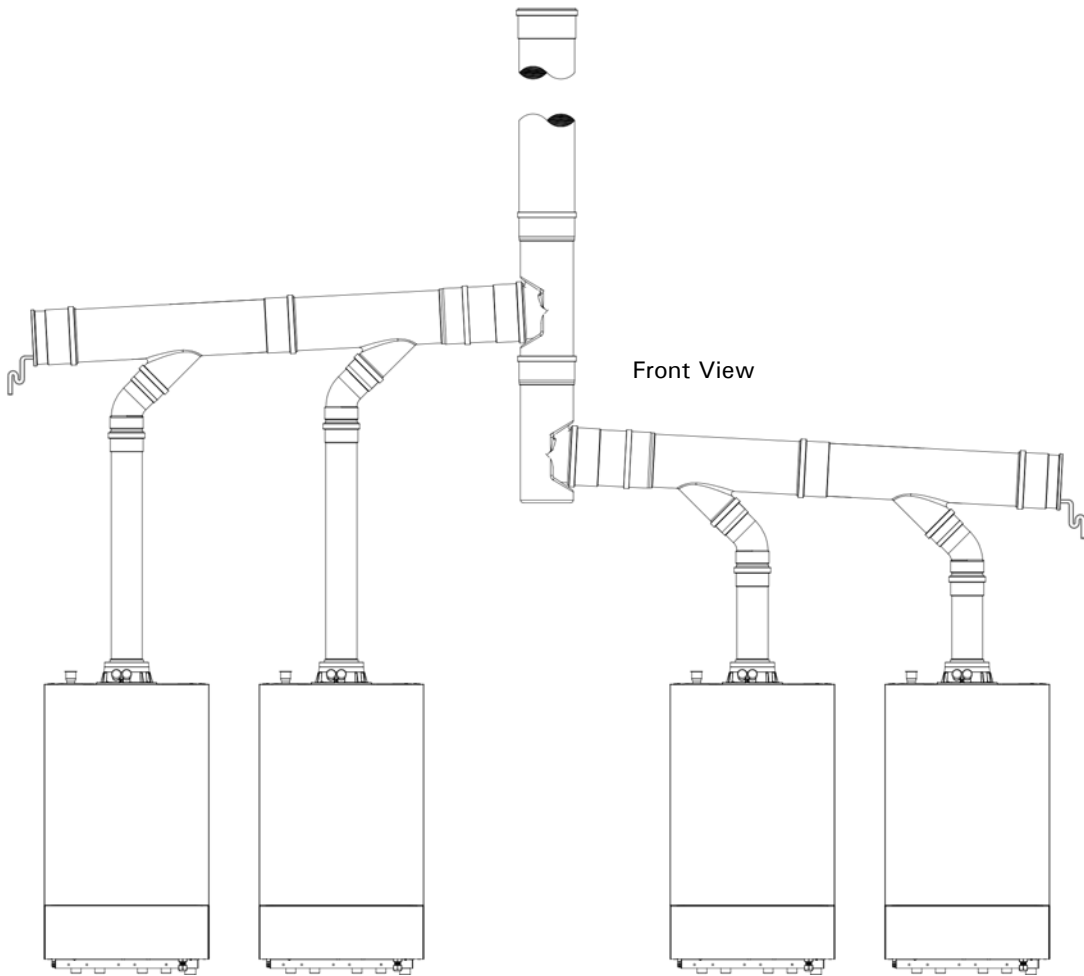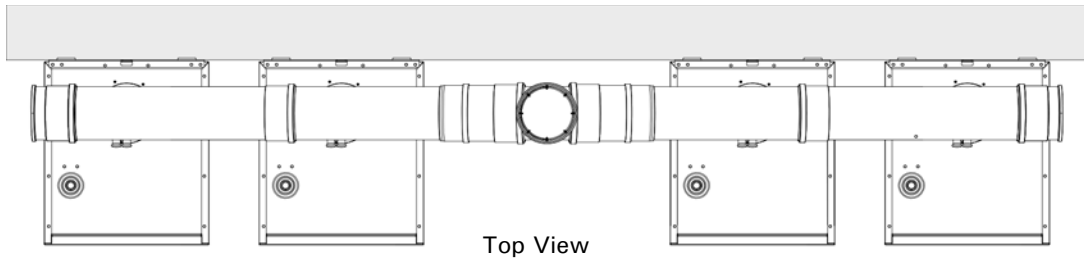

Note: This is a generic layout for illustration purposes only. Please contact the vent manufacturer for a project specific venting layout.

Horizontal Common Flue with Common Combustion Air Intake

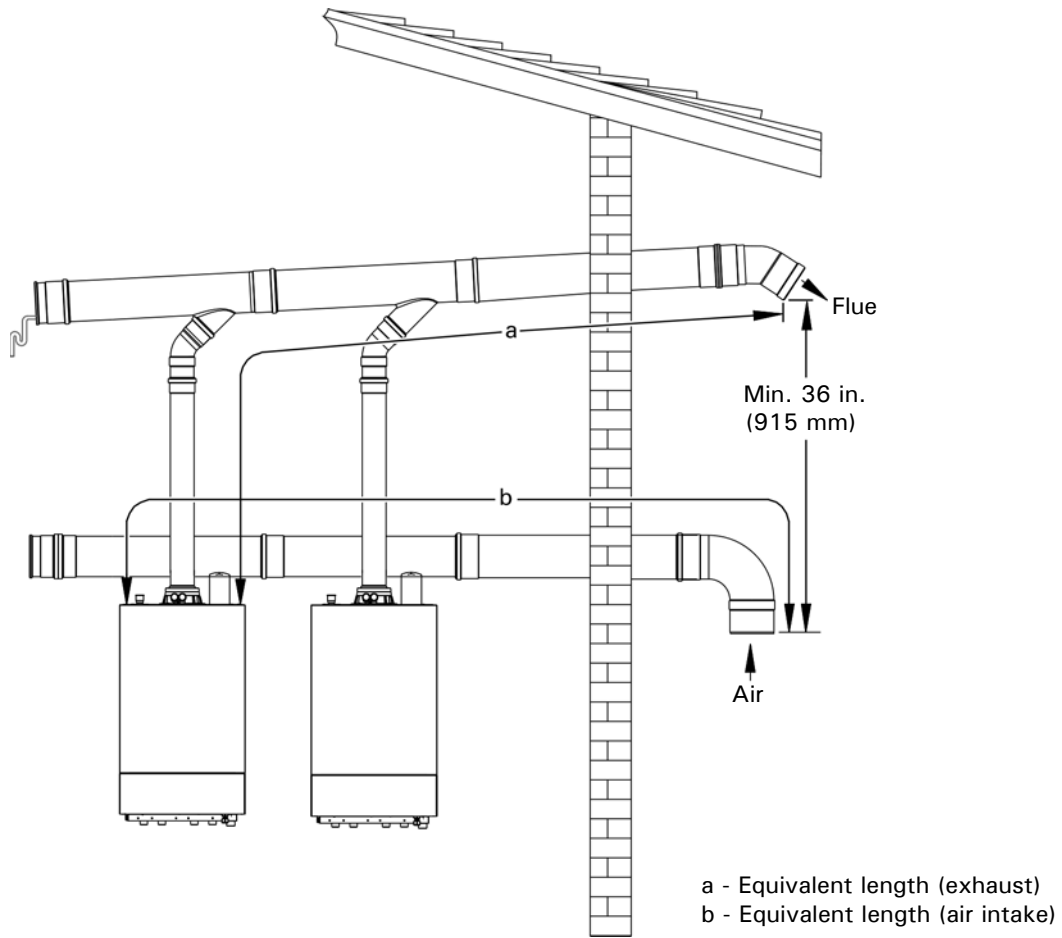

Boiler Input Ratings

Boiler model 200-W B2HE		85	120	150	199
CSA input Natural Gas (NG)	MBH	8.5-85	8.5-120	14-150	14-199
	kW	2.5-24.9	2.5-35.2	4.1-44.0	4.1-58.3
CSA input Liquid Propane Gas (LPG)	MBH	14-85	14-120	22.7-150	22.7-199
	kW	4.1-24.9	4.1-35.2	6.7-44.0	6.7-58.3
Common Vented Input Natural Gas (NG)	MBH	28-85	28-120	40-150	40-199
	kW	8.2-24.9	8.2-35.2	11.7-44.0	11.7-58.3
Common Vented Input Liquid Propane Gas (LPG)	MBH	28-85	28-120	40-150	40-199
	kW	8.2-24.9	8.2-35.2	11.7-44.0	11.7-58.3

Independent Combustion Air/Common Flue Vent Dimensions

Venting System for Vitodens 200 B2HE 85, 120, 150, 199

Diameter			
	Common vertical flue	in. (mm)	6 (150)
	Common horizontal flue	in. (mm)	6 (150)
	Combustion air intake	in. (mm)	3 (75)
Maximum equivalent length			
2 Boilers	Flue	ft. (m)	100 (30)
	Combustion air intake (per boiler)	ft. (m)	33 (10)
3 Boilers	Flue	ft. (m)	100 (30)
	Combustion air intake (per boiler)	ft. (m)	33 (10)
4 Boilers	Flue	ft. (m)	100 (30)
	Combustion air intake (per boiler)	ft. (m)	33 (10)

Common Combustion Air/Common Flue Vent Dimensions

Venting System for Vitodens 200 B2HE 85, 120, 150, 199

Diameter						
	Common vertical flue	in. (mm)	6 (150)	8 (200)	8 (200)	8 (200)
	Common horizontal flue	in. (mm)	6 (150)	6 (150)	8 (200)	8 (200)
	Common combustion air intake	in. (mm)	6 (150)	8 (200)	8 (200)	10 (250)
Maximum equivalent length						
2 Boilers	Flue	ft. (m)	100 (30)	--	--	--
	Combustion air intake	ft. (m)	33 (10)	--	--	--
3 Boilers	Flue	ft. (m)	100 (30)	--	--	--
	Combustion air intake	ft. (m)	33 (10)	--	--	--
4 Boilers	Flue	ft. (m)	N/A	100 (30)	100 (30)	100 (30)
	Common combustion air intake	ft. (m)	N/A	13 (4)	17 (5)	33 (10)

Note: Only same size and same series boilers can be connected to a common venting system.


Note: Individual feed elbows from the boiler must be included in the equivalent vent length calculation. See page 24 for elbow equivalent lengths. One 90° elbow (or two 45° elbows) and one base tee on the common header are excluded from the equivalent vent length calculation. See page 16 to calculate equivalent vent lengths.

Elbow - Equivalent Length

Equivalent Length

Elbow type	4 in. (100 mm)	6 in. (150 mm), 8 in. (200 mm), 10 in. (250 mm), 12 in. (300 mm), 14 in. (350 mm)
45°	1 ft. (0.3 m)	5 ft. (1.5 m)
90°	1.6 ft. (0.5 m)	10 ft. (3 m)

Standard Sizes of Boiler Flue Gas Adaptors

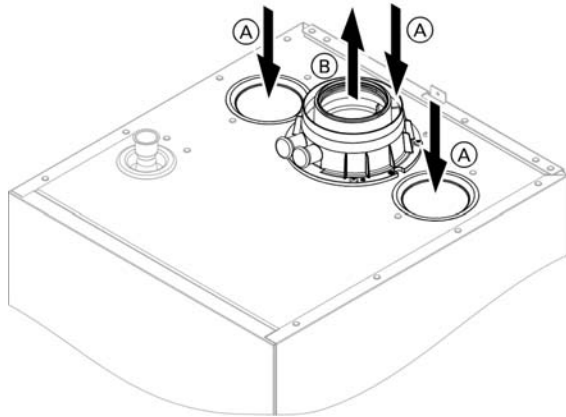

Standard sizes of boiler flue gas adaptors

Boiler model	Adaptor Size
B2HE 85, 120, 150, 199	80/125

Note: for direct vent two pipe systems the combustion air coaxial cover must be installed.



For direct vent applications the combustion air gaskets position can be interchanged. One gasket is sized for a 3.5 inch outside diameter (right side), the other is sized for a 3.15 inch outside diameter (left side).

Legend

- Ⓐ Combustion air
- Ⓑ Flue gas

Vent Termination Location Requirements - Vertical

The vent must be installed observing local regulations in addition to National Codes, CAN/CSA-B149.1 or 2 (for installations in Canada) or ANSI-Z223.1 or NFPA 54 (for installations in the U.S.A.).

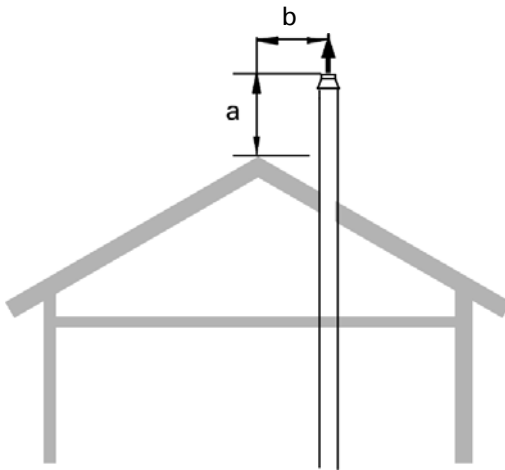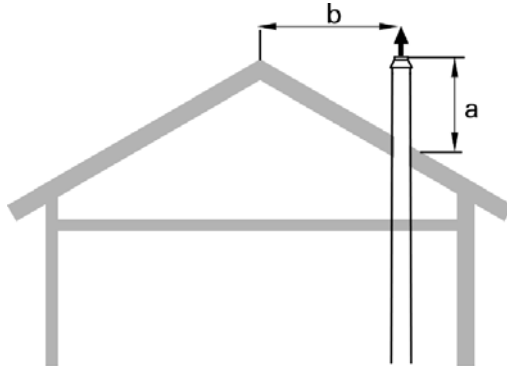

- For sloped roof applications with distance b less than 18 in. (450 mm)

a minimum 18 in. (450 mm)
 b < 18 in. (450 mm)


See table below for the following two conditions.

- For sloped roof applications with distance b greater than 18 in. (450 mm)
- For flat roof applications

Boiler Model	a (min. distance)
Vitodens 200-W	18 in. (450 mm)

WARNING

Vent termination must be at least 12 in. (300 mm) above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.

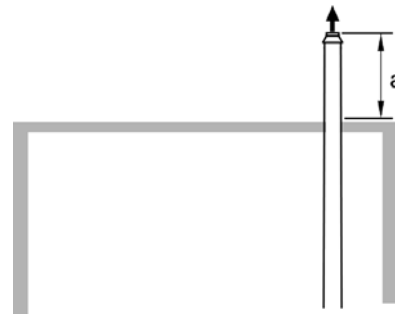

A vent used in a special venting system with positive vent pressure and passing through a roof shall extend at least 18 in. (450 mm) above the highest point where it passes through the roof and any other obstruction within a horizontal distance of 18 in. (450 mm).

The special vent system shall not be routed into, through, or within any other vent such as an existing masonry or factory-built chimney.

IMPORTANT

A masonry chimney flue may be used to route the venting system only if no other appliance is vented in the same flue.



Two Pipe System - Vertical Exhaust / Vertical Air Intake

IMPORTANT

For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).

IMPORTANT

All PP(s) vent termination elbows, must be secured in place as specified by manufacturer.

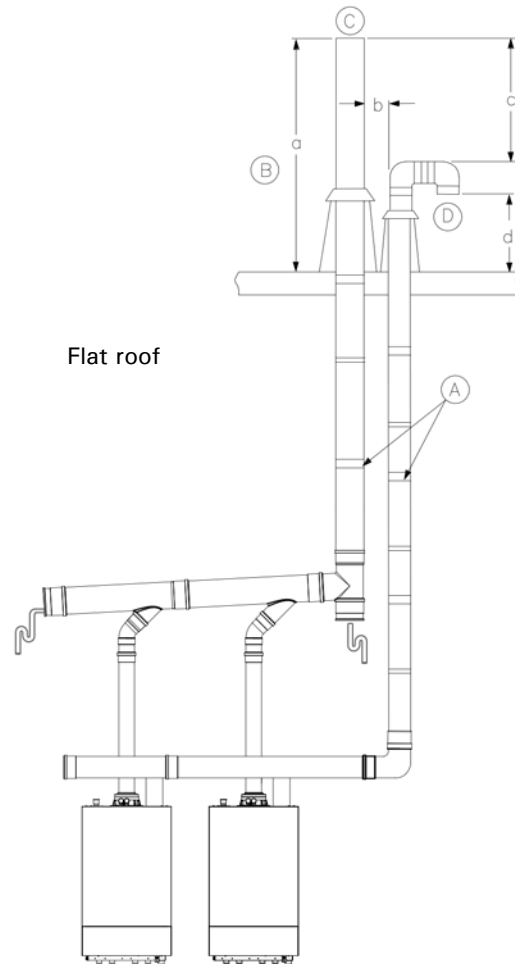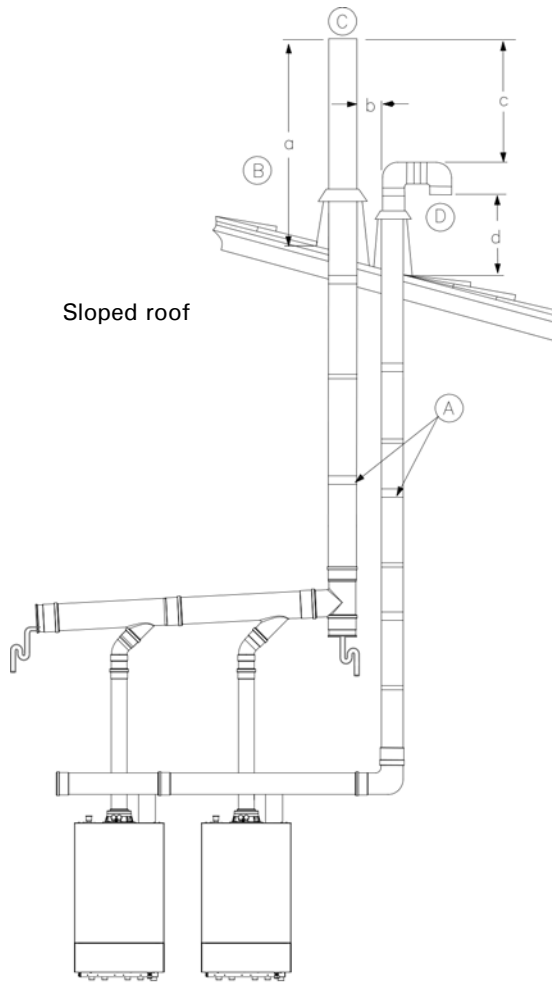

Legend




- (A) Support system
- (B) Flashings
- (C) Exhaust with screen
- (D) Combustion air intake with screen

Dimensions

- a min. 18 in. (457 mm) / max. 48 in. (1219 mm)
- b min. 0 in. (0 mm)
- c min. 12 in. (305 mm)
- d 6 in. (152 mm) over max. local snow level (check with your local weather office for details)

Direct Venting (Two Pipe System)

Side wall vent termination [stainless steel, CPVC or PP]

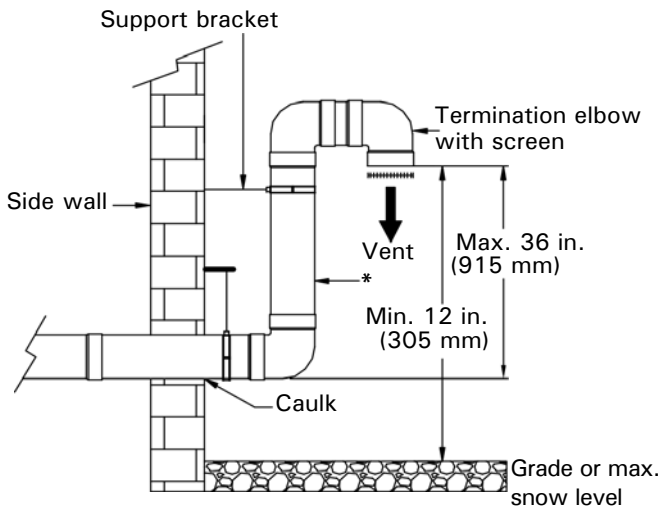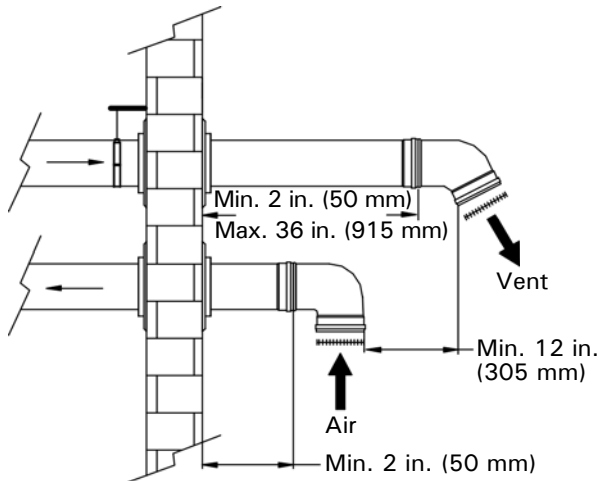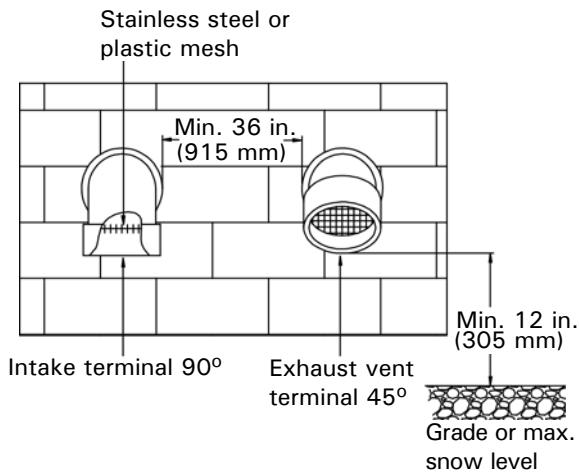

* Field fabricated vent riser

IMPORTANT

The exhaust vent/air intake system must terminate so that proper clearances are maintained as cited in local codes or the latest edition of the "Natural Gas and Propane Installation Code" CAN/CSA-B149.1 (Canada), or the "National Fuel Gas Code" ANSI Z223.1 (NFPA 54) (U.S.A.).

IMPORTANT

For PP systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).


WARNING

Vent termination must be at least 12 in. (305 mm) above the anticipated snow level (consult your local building authorities or local weather office). Locate vent termination in such a way that it cannot be blocked by snow.


Vent Length Requirements

Multiple boiler installations (vertical termination with multiple boilers)


When terminating the vertical vent pipes of multiple Vitodens boilers, a minimum clearance of 4 inches (100 mm) is required between the outside edges of each vent pipe.

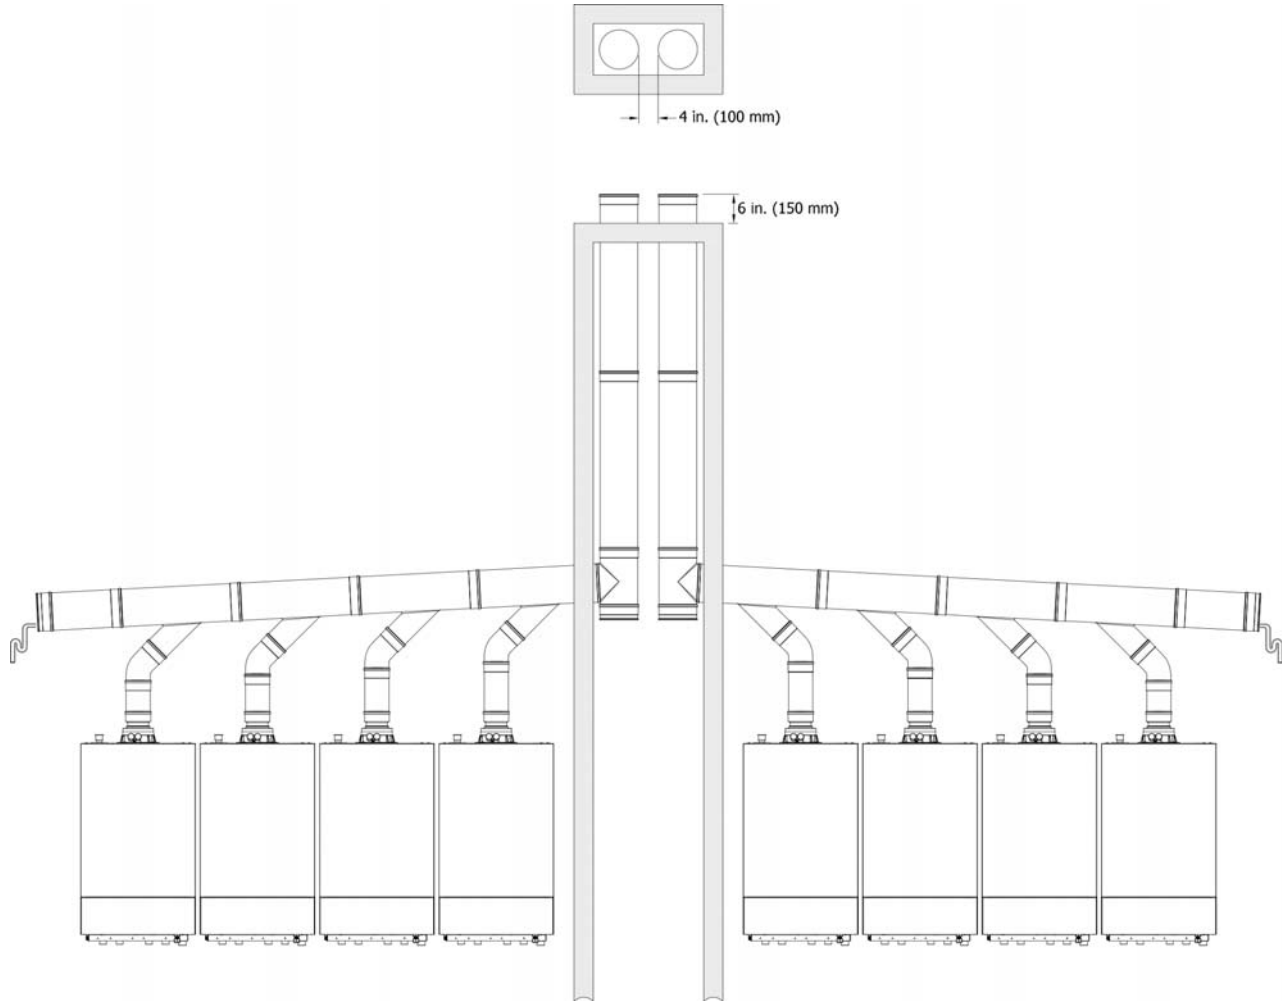


Installing Vent Piping




2x Vitodens 200-W




3x Vitodens 200-W



4x Vitodens 200-W (linear)

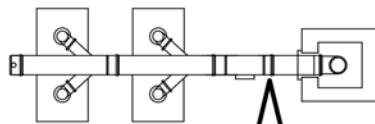


4x Vitodens 200-W (back-to-back)

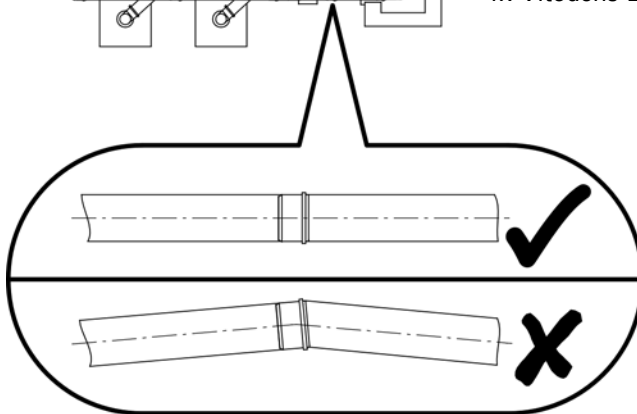

Note: Ensure that venting connections are aligned properly as per the manufacturer's instructions.

Flue Vent Damper

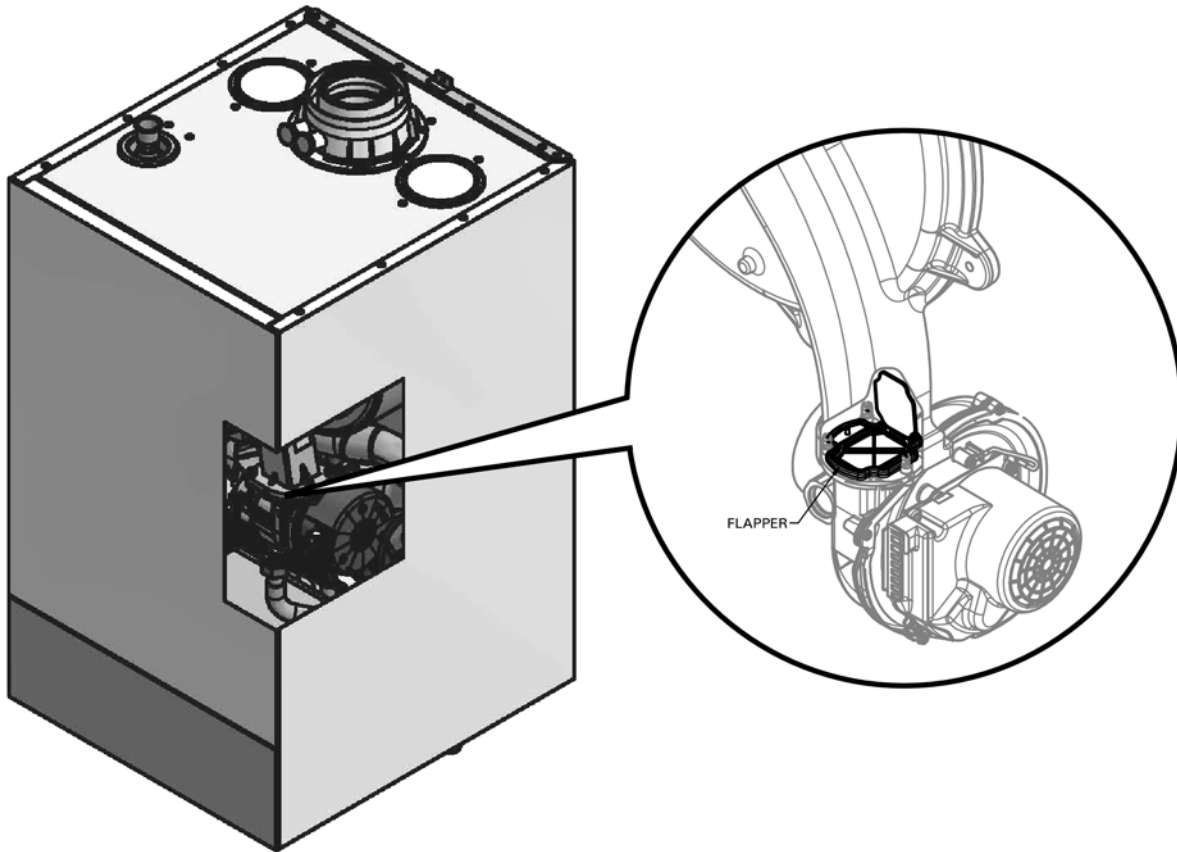

Flue gas flapper operation

The mechanical flue gas flapper is designed to prevent flue gas back flow through the boiler by utilizing burner pressure to open and close the flapper. The flapper is only open during burner operation and closed when the burner is not in operation. This provides an effective seal against back flow to the common venting system.

WARNING

Failure to provide adequate protection against flue gas leakage into living space can cause personal injury and/or loss of life!


This boiler is certified for use in a category IV positive pressure common venting system application. When this boiler is installed as part of a common venting system, performing service work, such as removing the burner and/or heat exchanger assemblies, requires that all other boilers in the common venting system are shut down until the service work has been completed. If the boiler's burner and/or heat exchanger assembly remains open, the boiler must be disconnected from the common venting system and the boiler flue connection on the common venting system must be sealed to prevent any flue gas leakage into the boiler room.

Two Pipe Options B2HE 85, 120, 150, 199

IMPORTANT

For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).


PP(s) Vent pipe
PP(s) Air intake pipe

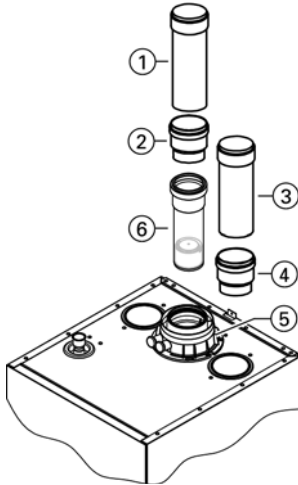

PP(s) Vent pipe
PP(s) Air intake pipe

#	Component	Supplied
①	Vent Component	Field
②	Vent increaser (if required) (80 mm to 100 mm)	Field
③	Air intake component	Field
④	Air intake increaser (if required) (80 mm to 100 mm)	Field
⑤	Boiler coaxial adaptor (80 mm / 125 mm)	C/W Boiler
⑥	Secondary flue gas flapper	Viessmann

PP(s) Vent pipe
CPVC, ABS or PVC Air intake pipe

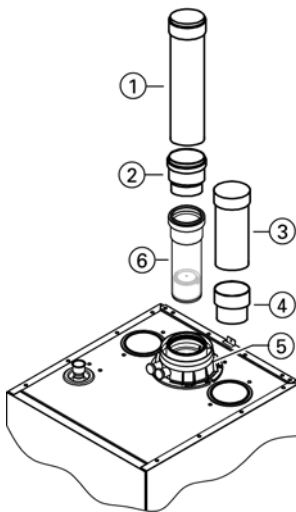


PP(s) Vent pipe
CPVC, ABS or PVC Air intake pipe

#	Component	Supplied
①	Vent Component	Field
②	Vent increaser (if required) (80 mm to 100 mm)	Field
③	Air intake component	Field
④	Air intake increaser (if required) (3 in. to 4 in.)	Field
⑤	Boiler coaxial adaptor (80 mm / 125 mm)	C/W Boiler
⑥	Secondary flue gas flapper	Viessmann

Two Pipe Options B2HE 85, 120, 150, 199 *(continued)*


CPVC Vent pipe
CPVC, ABS or PVC Air intake pipe

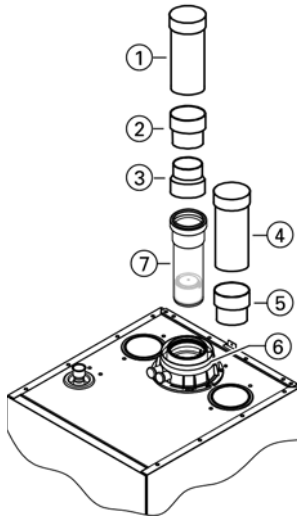

CPVC Vent pipe
CPVC, ABS or PVC Air intake pipe

#	Component	Supplied
①	Vent Component	<i>Field</i>
②	Vent increaser (if required) (3 in. to 4 in.)	<i>Field</i>
③	Vent adaptor, (80 mm to 3 in.)	<i>Viessmann</i>
④	Air intake component	<i>Field</i>
⑤	Air intake increaser (if required) (3 in. to 4 in.)	<i>Field</i>
⑥	Boiler coaxial adaptor (80 mm / 125 mm)	<i>C/W Boiler</i>
⑦	Secondary flue gas flapper	<i>Viessmann</i>

Stainless Steel Vent pipe
CPVC, ABS or PVC Air intake pipe

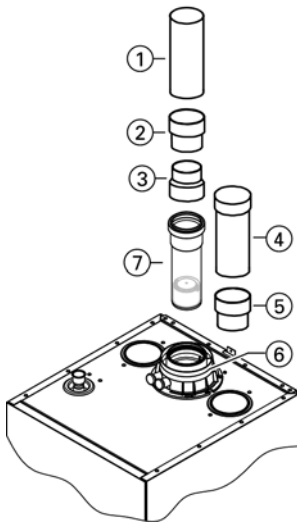

Stainless Steel Vent pipe
CPVC, ABS or PVC Air intake pipe


#	Component	Supplied
①	Vent Component	<i>Field</i>
②	Vent increaser (if required) (3 in. to 4 in.)	<i>Field</i>
③	Vent starter adaptor (SS), (80 mm to 3 in.)	<i>Field</i>
④	Air intake component	<i>Field</i>
⑤	Air intake increaser (if required) (3 in. to 4 in.)	<i>Field</i>
⑥	Boiler coaxial adaptor (80 mm / 125 mm)	<i>C/W Boiler</i>
⑦	Secondary flue gas flapper	<i>Viessmann</i>

Single Pipe Options B2HE 85, 120, 150, 199 (Room Air Dependent)

IMPORTANT

For PP(s) systems, all exhaust vent and air intake piping and elbows exposed outside, must be UV resistant polypropylene (supplied by the vent manufacturer).


PP(s) Vent pipe

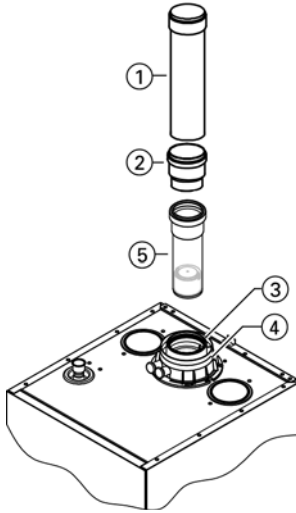

PP(s) Vent pipe

#	Component	Supplied
①	Vent Component	Field
②	Vent increaser (if required) (80 mm to 100 mm)	Field
③	Combustion air inlet (location)	
④	Boiler coaxial adaptor (80 m / 125 mm)	C/W Boiler
⑤	Secondary flue gas flapper	Viessmann

CPVC Vent pipe

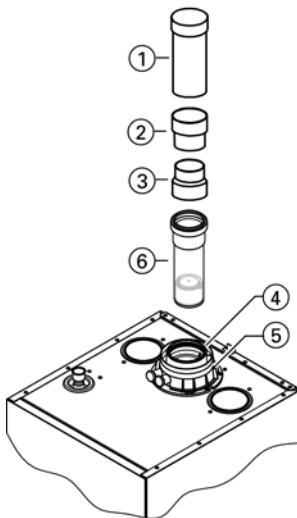


CPVC Vent pipe

#	Component	Supplied
①	Vent Component	Field
②	Vent increaser (if required) (3 in. to 4 in.)	Field
③	Vent adaptor, (80 mm to 3 in.)	Viessmann
④	Combustion air inlet (location)	
⑤	Boiler coaxial adaptor (80 mm / 125 mm)	C/W Boiler
⑥	Secondary flue gas flapper	Viessmann


Single Pipe Options B2HE 85, 120, 150, 199 (Room Air Dependent) *(continued)*

Stainless Steel Vent pipe

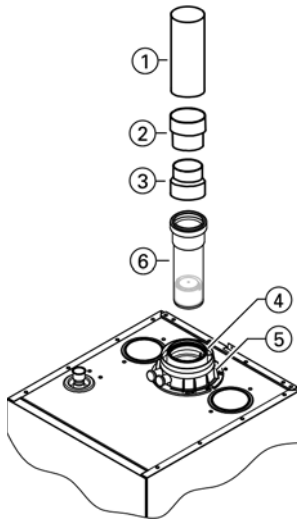

Stainless Steel Vent pipe

#	Component	Supplied
①	Vent Component	<i>Field</i>
②	Vent increaser (if required) (3 in. to 4 in.)	<i>Field</i>
③	Vent starter adaptor (SS), (80 mm to 3 in.)	<i>Field</i>
④	Combustion air inlet (location)	
⑤	Boiler coaxial adaptor (80 mm / 125 mm)	<i>C/W Boiler</i>
⑥	Secondary flue gas flapper	<i>Viessmann</i>

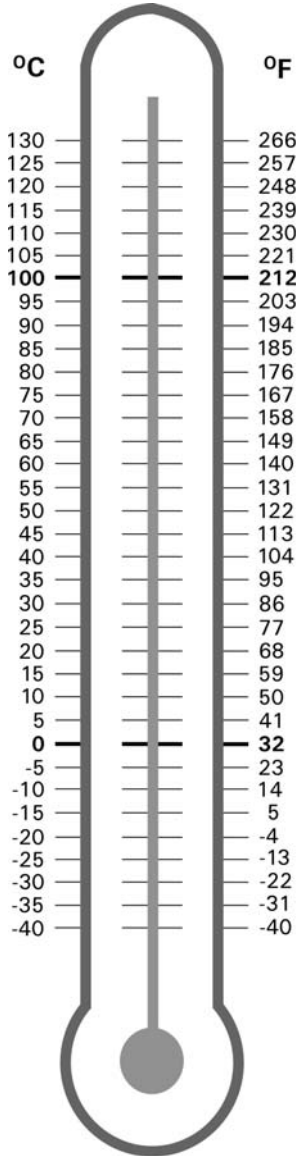

Printed on environmentally friendly
(recycled and recyclable) paper.

Technical information subject to change without notice.

Scan for
digital copy
of this
document



Viessmann Manufacturing Company Inc.
750 McMurray Road
Waterloo, Ontario • N2V 2G5 • Canada
TechInfo Line 1-888-484-8643
1-800-387-7373 • Fax (519) 885-0887
www.viessmann.ca • info@viessmann.ca

Viessmann Manufacturing Company (U.S.) Inc.
45 Access Road
Warwick, Rhode Island • 02886 • USA
TechInfo Line 1-844-649-5886
1-800-288-0667 • Fax (401) 732-0590
www.viessmann-us.com • info@viessmann-us.com